


SEC 3500 OI Basic Operator's Manual

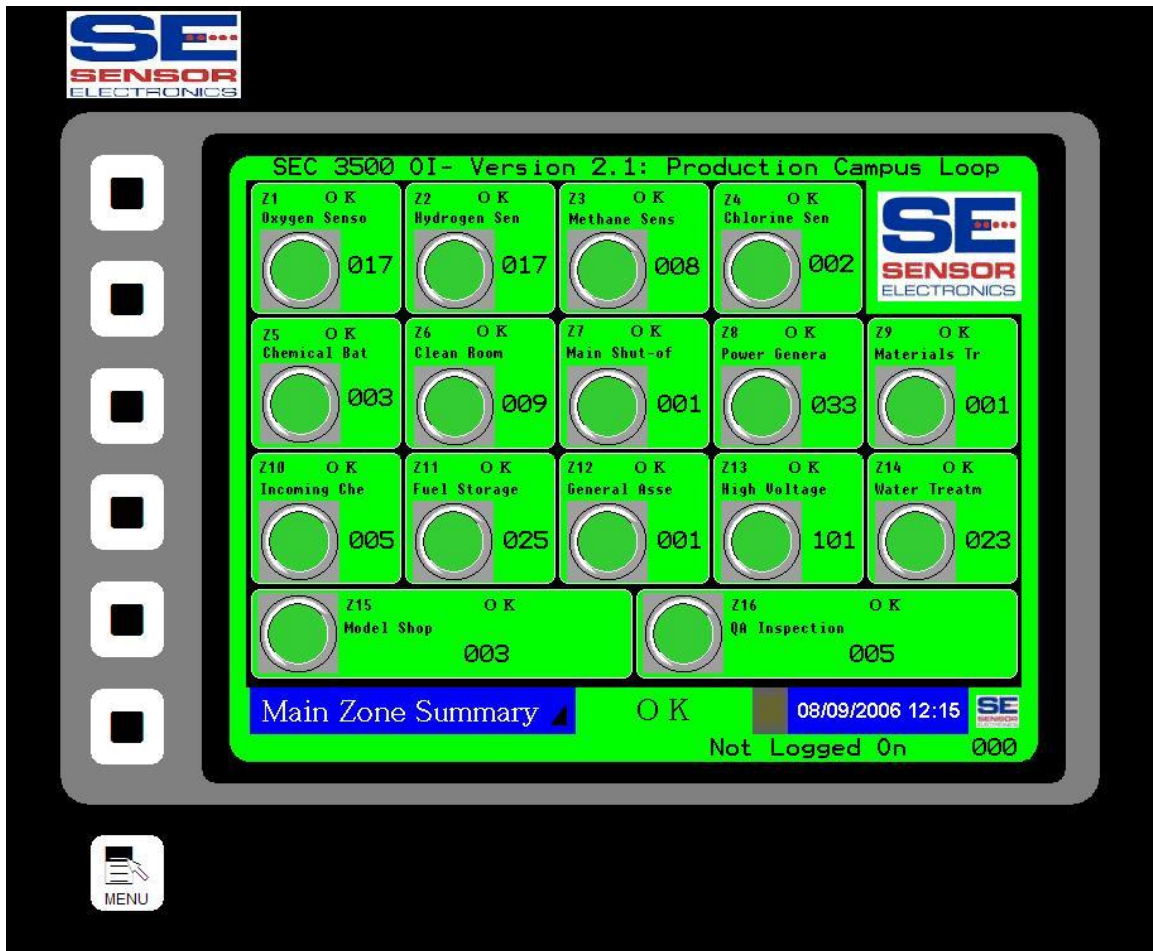

July, 2007

Sensor Electronics Corporation
12730 Creek View Avenue
Savage, Minnesota 55378 USA
(952) 938-9486

Table Of Contents:

1.0	Purpose.....	4
2.0	Overview.....	4
2.1	Immediate Audible Alarm Silence.....	4
3.0	First Time Setup/Updating Setup.....	5
4.0	Basic Screen Navigation.....	6
4.1	Main Zone Summary Screen	7
4.1.1	Main Zone Summary Global Status Borders	8
4.1.2	Main Zone Summary Screen- Zone Status Info	9
4.1.3	Main Zone Summary Screen- Status Bar.....	11
4.1.4	Main Zone Summary Screen with Alarms.....	12
4.2	Screen Saver.....	13
4.3	Transitioning from Main Zone to Bus Summary.....	14
4.3.1	Transitioning From Main Zone to Alarm Summary.....	15
4.3.2	Transitioning from Main Zone to Zone Details Screen	16
4.4	The Zone Details Screen.....	17
4.4.1	Zone Details Top Level Information	17
4.4.2	Zone Details Device Icons	18
4.4.3	Navigating to Device/Sensor Summary.....	19
4.4.4	Zone Details Screen Showing SEC Relay Modules	20
4.5	Bus Summary Screen.....	21
4.5.1	Bus Summary Screen Showing SEC Relay Modules	22
4.6	Alarm Summary Screen.....	23
4.6.1	Alarm Summary Returning to Home Zone Summary	24
4.6.2	Alarm Summary with Partial Set of Devices	24
4.6.3	Alarm Summary with more than eight devices.....	25
4.7	Device Summary Screen.....	26
4.7.1	Top Level Device Information.....	26
4.7.2	Left Action Buttons.....	27
4.7.3	Summary Box Details.....	28
4.7.4	Navigation to Sensor Details Screen.....	28
4.7.5	Device Summary Screen for SEC Relay16 Modules	29
4.7.6	Device Summary Screen for SEC Relay8 Modules	30
4.7.7	SEC Relay Module Device Summary Screen Specifics	31
4.8	Sensor Details Screen	32
4.8.1	Top Level Information Box	32
4.8.2	Details Box.....	33
4.8.3	Control Panel	34
4.8.4	Relay Module Device Coil Assignments Screen	35
5.0	Basic Menu Navigation.....	37
5.1	Main Menu.....	38
5.2	Safe Power-Down Screen	39
5.3	“About SEC...” Popup Display	41
5.4	The Security Screen- Login/Logout.....	42

5.5	Screen Selection Menu	43
5.5.1	Zone Details Selection Menu.....	44
5.5.2	Set 3100 Clock Screen	45
5.5.3	Restarting the SEC 3500 HMI	46
6.0	Basic Trouble-Shooting	47
7.0	How Does the SEC 3500 Modbus 485 Loop Work?	49

1.0 Purpose

This document describes how to use the SEC 3500 Operator Interface (OI) Panel, from a basic operator user perspective (not for setup configuration or maintenance; see the separate manual's for each operator user class and the startup basics manual). It describes the basic operation, basic screens and basic screen/menu navigation. This document is NOT a detailed all-encompassing Supervisor or Technical User's Manual. This manual is part of a documentation pack that contains all necessary information for using, starting up, configuring and enabling higher-end functionality, and is the second manual in the pack necessary for getting started.

2.0 Overview

The SEC 3500 OI Panel drives and masters the SEC 3500 Modbus 485 Digital Gas Monitoring Loop, based on the loop-attached SEC 3100 Digital Gas Transmitter slaves. It draws information from all SEC 3100 Digital Gas Transmitters on the loop into a single location, where all information is accessible and configurable. In addition, it adds features for controlling separate SEC Modbus 485 Relay modules, allowing a central coordinated command and control center for a given loop.

The SEC 3500 OI is a self-contained standalone intelligent touch-screen Human Machine Interface (Operator Interface Panel). It contains various communication ports for RS485 communications, RS232 Gas Status Text Dumps, and 10/100mb Ethernet for Web-based services. It also contains a compact flash card socket for software updates and data logging. It operates on 24vdc, and permanently stores its program and non-volatile data in internal flash memory- There are NO disk drives.

2.1 Immediate Audible Alarm Silence

The SEC 3500 OI is equipped with an audible alarm, built right into the panel. It begins to sound and flash the screen whenever any SEC 3100 device enters one of the alarm conditions defined by it or by any Global Alarm set point triggered for any one of the so configured Relay Modules at the SEC 3500 panel. If a Global Alarm relay is set to trigger, that specific Relay Module coil will also be engaged as it is configured, and one of the allowed relay types is the "Audible Alarm": this type of alarm is intended to augment the 3500 OI panel's internal speaker and screen flash mechanism by allowing user's to so equip their environments with user defined Audible speakers, horns, or such other attention-grabbing devices. The 3100 also contains audible alarm types and behave identically. These 3100 audible relays are also silenced by the Global Alarm Silence icon on the 3500.

Once an alarm triggers the 3500 OI Global Alarm, it will not stop sounding until *all* alarm conditions are cleared, or the Alarm is silenced. A graphical large icon of a speaker with a red "x" across it will appear in



the top-right corner of all screens, when an alarm condition exists. If the icon is pressed, the Global Alarm will be silenced and all “Audible” type Relays and 3100 audible relays will be silenced as well (then the alarm silence icon is removed and the previous contents restored). However, if an alarm condition returns, the Global Alarm will again sound, as well as all defined “Audible” alarms.

If the “Global Latch Reset” feature is enabled, its icon may remain on the very same upper-right hand corner of the Main Zone Summary Screen if a Relay Module coil has been defined to latch and has entered a latched state, even if the “Audible” silence icon has been pressed (this “Global Latch Reset” button remains in the same location until it is pressed, and once pressed, provides a status reset showing the current device ID number as the latches are being reset- once the reset is complete, the icon will return to the main SEC logo if no further Global Alarm silencing is required).




Resetting
All Alarm
Latches
Now...
ID: 254

3.0 First Time Setup/Updating Setup

The very first time you turn on the SEC 3500 with an SEC 3500 Modbus 485 Digital Gas Monitoring loop connected with SEC 3100 Digital Gas Transmitter slave(s) attached, you may have a blank main screen once it is powered up, such as this:



If so, then this is either the first time the 3500 has been powered on, or you do not have the Gas Monitoring loop setup/configured properly, or you have not detected any SEC 3500 compatible devices yet. Otherwise, if at least one compatible device is connected, online and had been setup previously, then at least one of the sixteen zone summary boxes would be green- see below:

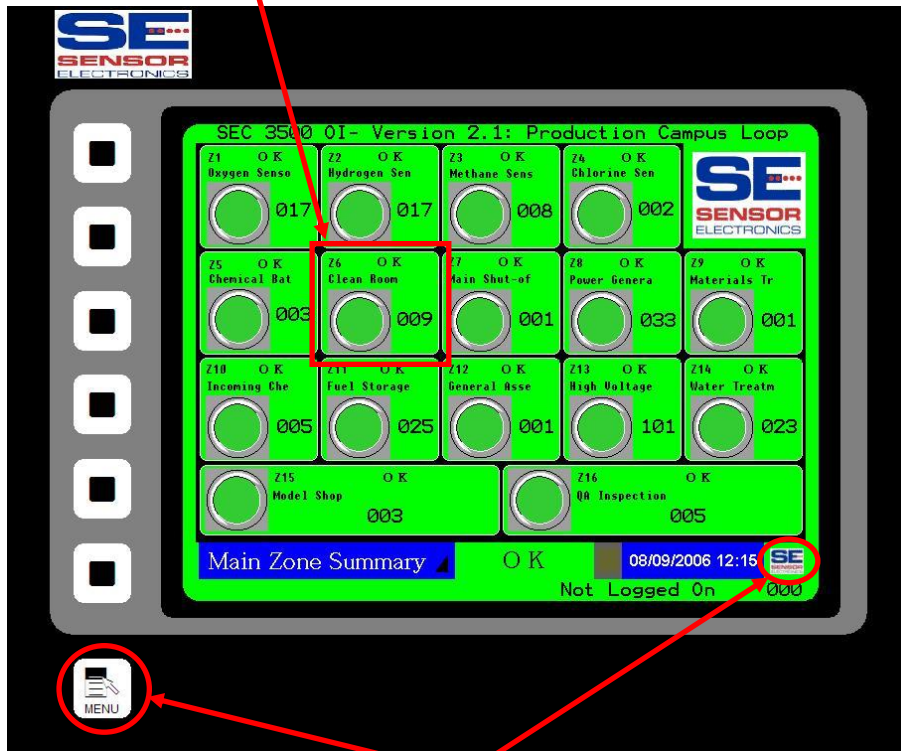

(Menu Button Areas)

If this is the first time startup, or scanning the loop for new devices, refer to the “Startup Basics Guide” and “Supervisor’s Manual” to establish the panel.

4.0 Basic Screen Navigation

The goal of this section is to describe the basic screens and their touch-screen navigation methods that provide the normal operational information at all the different information levels:

- **Level 1- Device.** Information is captured at the lowest level; every SEC 3100 Digital Gas Transmitter device connected to the SEC 3500 Primary Modbus Gas Transmitter Loop. Under normal operation, only Gas level and Transmitter status is captured for each SEC 3100 device on the loop, once per scan, repeated infinitely.
- **Level 2- Zone.** Per scan, Gas levels and alarm states are collected, sorted and summarized into the sixteen different zones shown on the “Main Zone Summary” screen. Each device can only be assigned to one of these sixteen zones. The highest alarm level (highest possible level is a Fault) of all devices in each zone determine each zone alarm rollover level.

- **Level 3- Global.** Then, all zones are rolled up together to create a single global status for the particular SEC 3500 Loop, which again will be the highest alarm level of all the sixteen zones. If there are SEC Modbus 485 Relay Modules connected to the Loop, with coils assigned to either individual SEC 3100 devices, individual zones, or to the Loop global status levels, the assigned Boolean logic formulas are applied to each assigned coil and the coil energize/de-energize results are applied. Following this, if the RS232 Gas Status Text Dump (StatCast) feature is enabled, then its next window of data is output. Then the loop is repeated infinitely.


This now forms the basis for how the information is displayed, as follows:

- **Main Zone Summary.** This shows both the Level 3 Global Alarm status in the borders of the screen, and the individual Zone Alarm status (Level 2) for each of the sixteen zones in sixteen individual boxes within the inside of the global borders. These global borders will contain the global status (encoded in colors and flash rates) in this same way for all of these basic operations screens at all three levels.
- **Bus Summary.** This shows all devices (Level 1) that are on the 3500 loop. Each device, regardless of zone, is shown in a simple small box, and all devices can be viewed by scrolling back and forth 8 devices at a time. The borders depict the Global Alarm status (Level 3).
- **Zone Details.** This shows all devices (Level 1) that are in a specific zone. Each device within the zone is shown in a simple small box just like the bus summary screen, and all devices can be viewed by scrolling back and forth 8 devices at a time. The borders depict the Global Alarm status (Level 3).
- **Device Summary.** This shows the Gas and Alarm status for a specific SEC 3100 device (Level 1). The borders depict the Global Alarm status (Level 3), yet a summary icon at the top-right indicates the device alarm status.
- **Sensor Details.** This shows all basic parameters as well as Gas and Alarm status information for a specific SEC 3100 device (Level 1). The borders depict the Global Alarm status (Level 3), yet a summary icon at the top-right indicates the device alarm status.

4.1 Main Zone Summary Screen

The Main Zone Summary screen, as previously generalized, depicts the highest alarm levels for all devices within each zone, and the highest alarm level of all of the zones in the Loop global status. Zones are depicted as sixteen different boxes within the borders, and the borders indicate the Loop global status. This screen is the primary default and normal operation screen. All other screens eventually time out and will ultimately fall back here. When this screen times out, then the screen saver is shown; and when the screen saver is touched, it returns to this Main Zone Summary screen. Now let's examine the parts and information contained, see the screen-shot on the following page.

Main Zone Summary Screen- Global Status Borders:

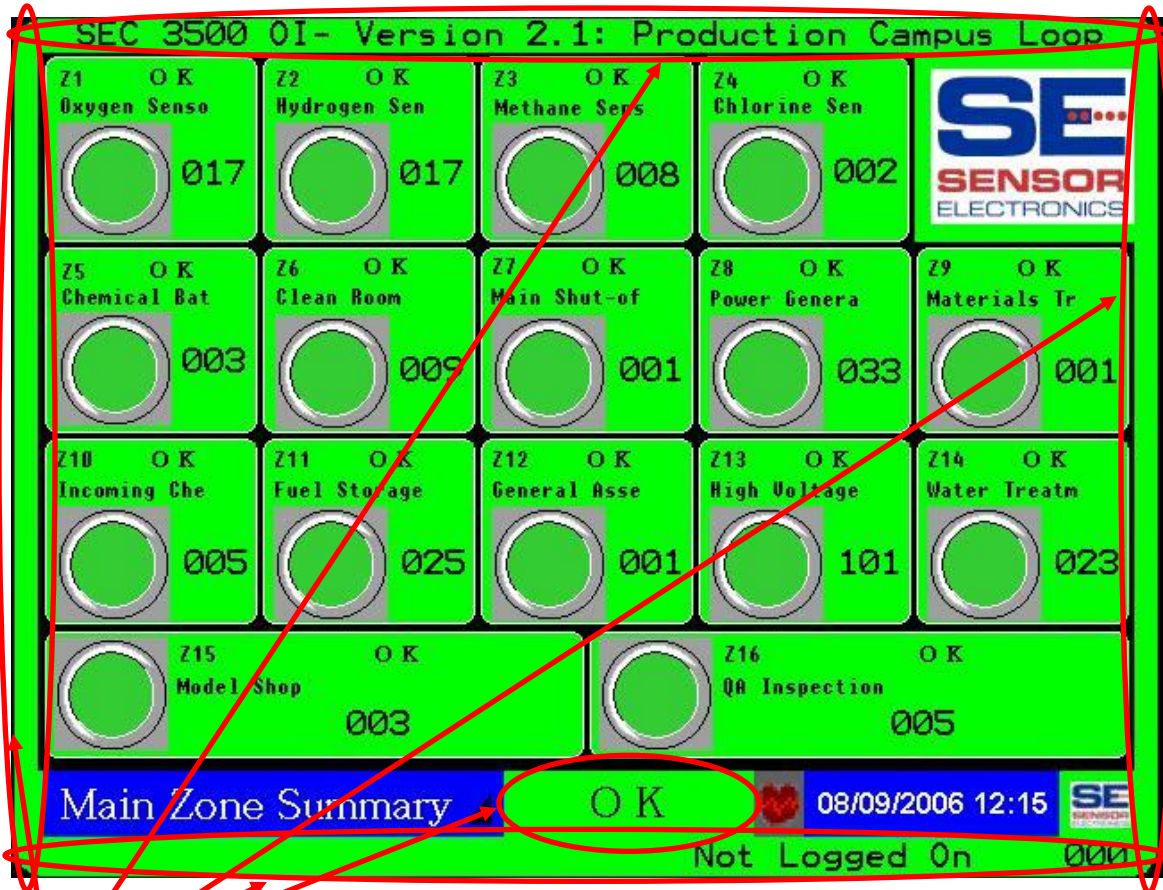


4.1.1 Main Zone Summary Global Status Borders

These borders, present not just on the Main Zone Summary screen, yet also on all of the major operations screens, show the color of the global alarm status:


- 1) Green Green for “OK” or normal operations (not flashing- steady), no alarm or fault conditions in the global status, any zone, or any device that is on-line.
- 2) Yellow Yellow (and no flashing) for “Low Alarm” conditions, flashing to gain attention (and no fault conditions); for the global status, or for one or more zone(s) and for one or more device(s) that is/are on-line.
- 3) Orange Orange (and no flashing) for “Mid Alarm” conditions, flashing to gain attention (and no fault conditions); for the global status, or for one or more zone(s) and for one or more device(s) that is/are on-line.
- 4) Red for Red “High Alarm” conditions, flashing more erratically to gain attention (and no fault conditions); for the global status, or for one or more zone(s) and for one or more device(s) that is/are on-line.



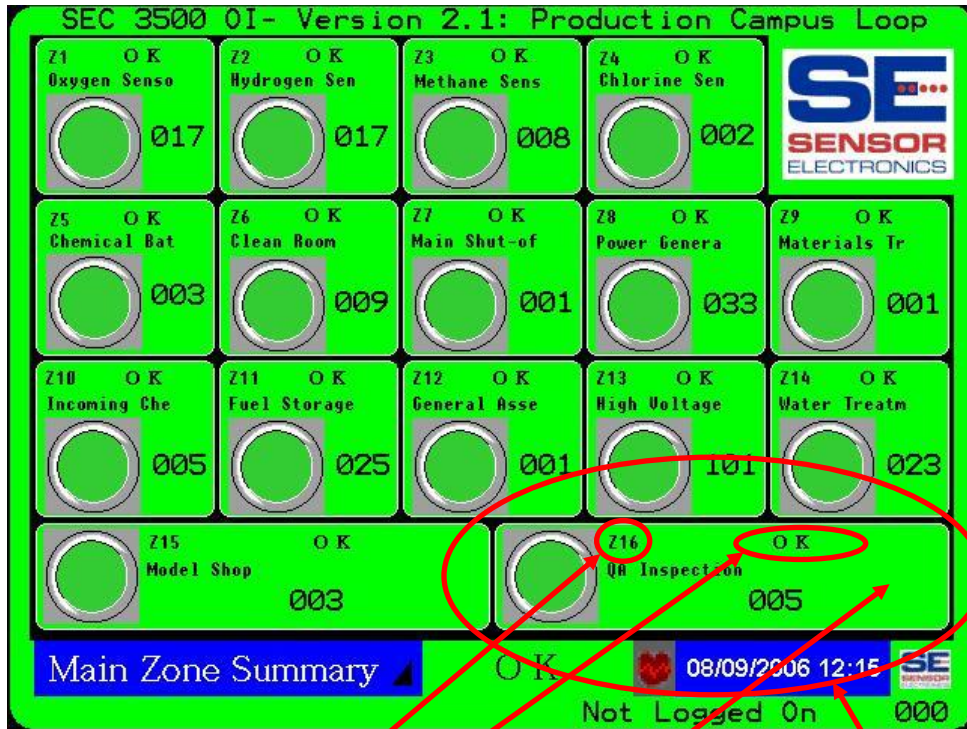


- 5) Red for **Red** “Fault” conditions, flashing to gain attention (not erratically); for the global status, or for one or more zone(s) and for one or more device(s) that is/are on-line, or for a device that has been deemed off-line.
- 6) The alarm status text (bottom-middle box, just above the bottom global status border) also shows the same coloring with the words as follows; Normal condition (not flashing- steady): **OK** Low-Alarm condition (flashing): **Low Alarm**
- Mid-Alarm condition (flashing): **Mid Alarm** High-Alarm condition (erratic flashing): **High Alarm** And Fault condition (flashing): **Fault**

4.1.2 Main Zone Summary Screen- Zone Status Info

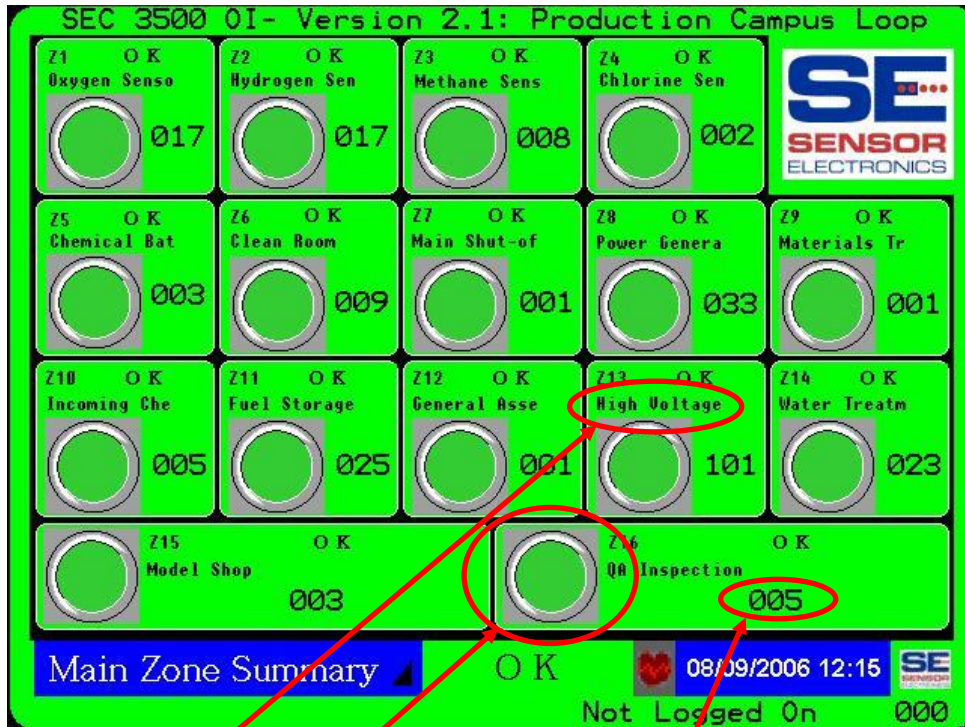


- 1) There are sixteen zones, and therefore sixteen individual zone status boxes on the screen. They indicate;
- The Zone Number,
 - The Zone Status Text and Status Color (never flashes) as described in section 4.1.1 previously for the global alarm status box,



- c) The Zone Name,
- d) The Zone Status Icon;
 - i) OK, 
 - ii) Low Alarm, 
 - iii) Mid Alarm, 
 - iv) High Alarm, 
 - v) Fault, 
- e) The Zone On-Line Device Count.

4.1.3 Main Zone Summary Screen- Status Bar

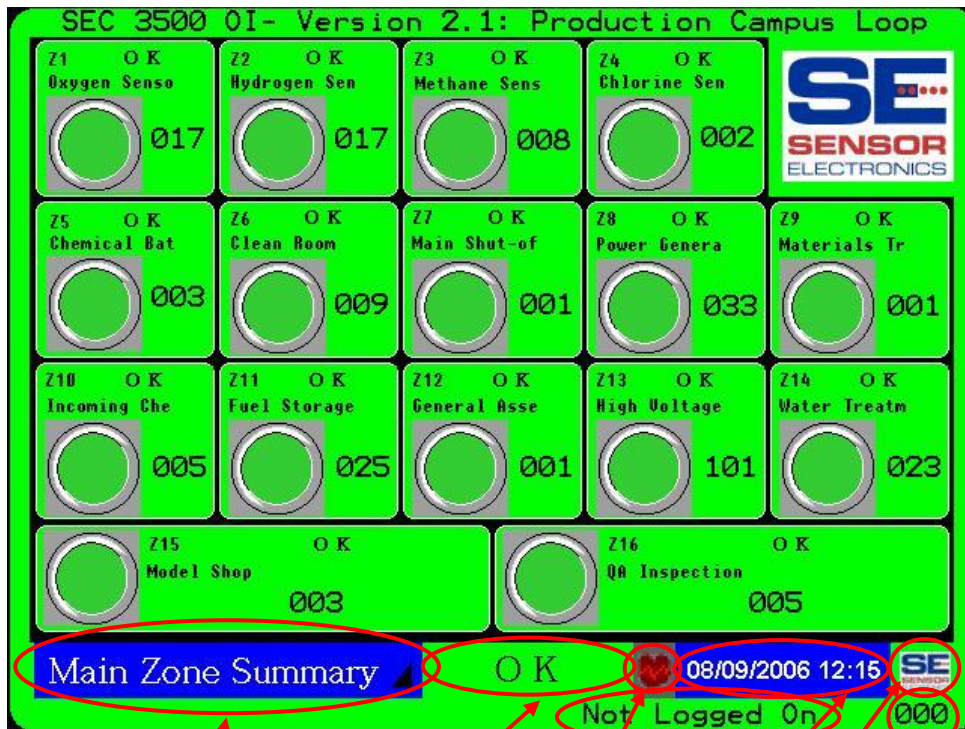


- 1) Screen Label & Navigation.
 - a) Press to toggle between Main Zone Screen and Bus Summary Screen.
- 2) Global Alarm Status Text- (As previously described in 4.1.1). Press this to display Alarm Summary.
- 3) Communications Currently Reading Bus.
- 4) SEC 3500 Clock Date and Time Display (Press to enter the Clock change screen.
- 5) SEC Logo- Press to bring up the SEC Main Menu.
- 6) Current Operator Logged On to the SEC 3500 Panel (Operator is default without a logon), and Time Remaining before Auto-Logoff.



Important Note: It is important to realize that the bottom status bar region remains constant for all of the main operations screens, along with the global status bars and status text. The only difference will be the screen name in the lower left corner. If the screen name is followed by a navigation indicator icon (as it is in the above screen), then it allows rapid navigation between it and the Bus Summary screen.




4.1.4 Main Zone Summary Screen with Alarms

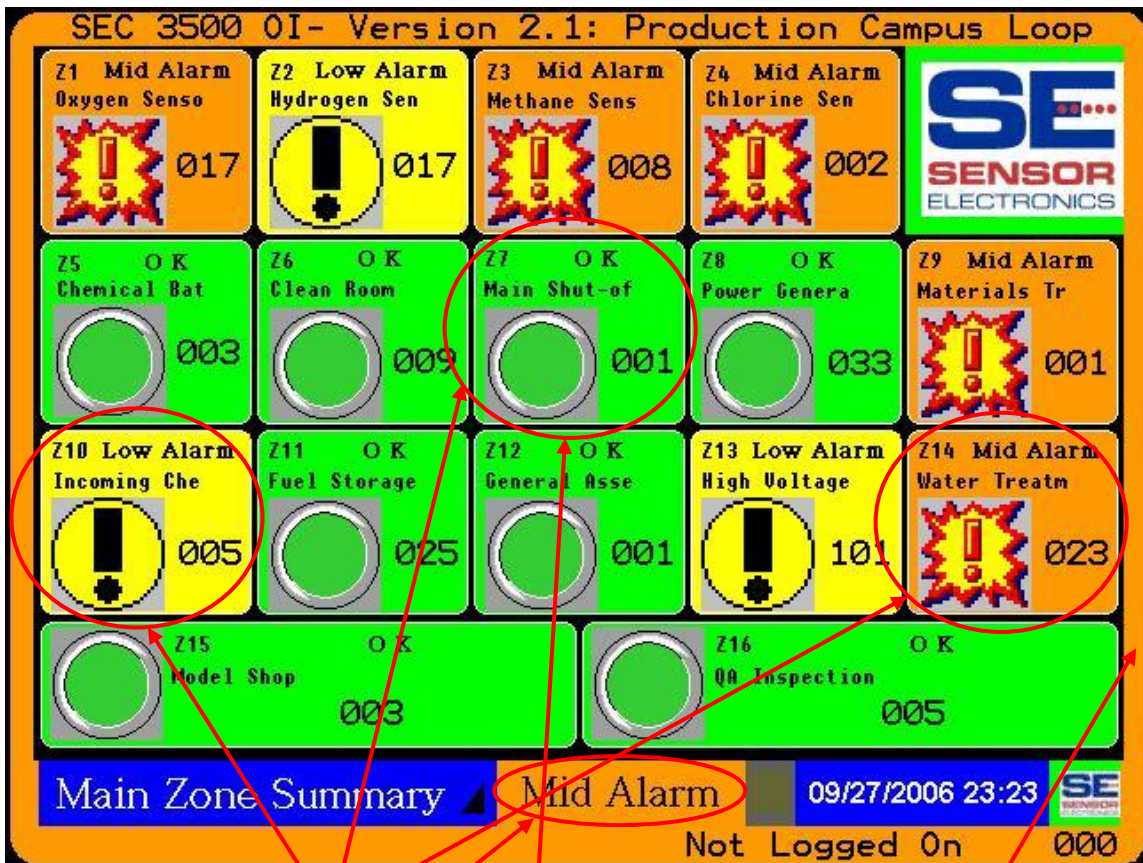

- 1) Note that the each zone maintains its own rollup status of all of its assigned devices, which is separate from the global rollup loop status shown in the borders and in the global rollup status text in the bottom bar.
- 2) This zone contains an SEC Relay Module.

4.2 Screen Saver

The screen saver only appears when the Main Zone Summary screen has not been touched or a key activated by an operator for the screen saver timeout period, initially set from the factory at sixty seconds. When this occurs, the Main Zone Summary screen disappears and the screen saver appears:

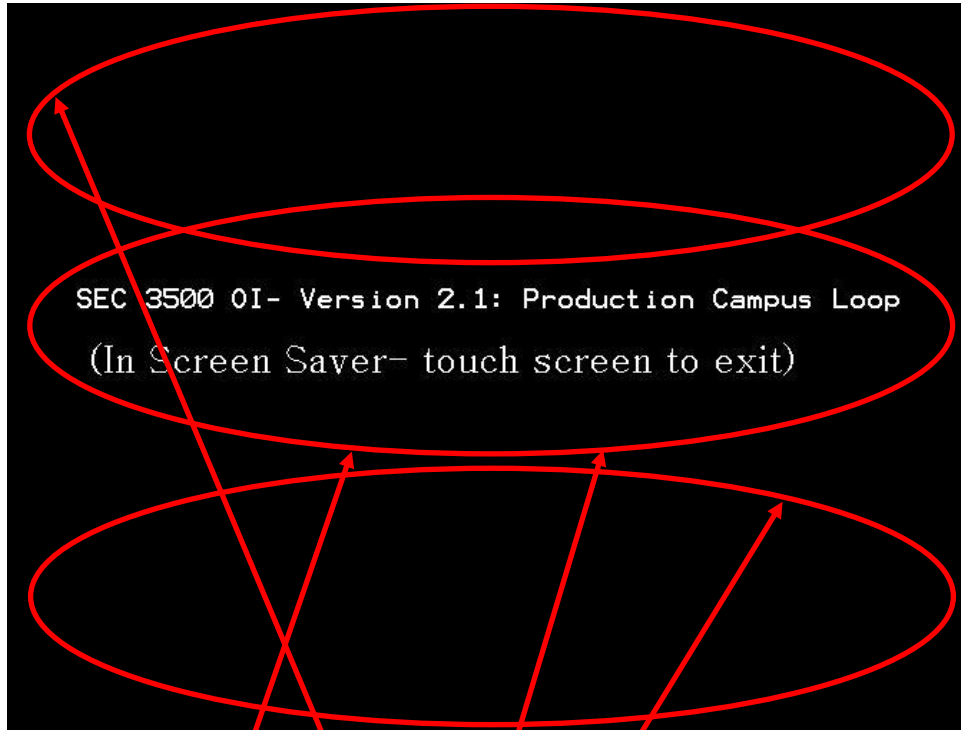


- 1) The Screen Saver Text rolls down from the top of the screen to the bottom of the screen in three distinct moves (top, middle, bottom) and repeats itself forever, or until the operator touches any portion of the screen, transitioning back to the Main Zone Summary screen. As each roll is made from top to middle, middle to bottom, bottom back to top; the text and graphics in the position that is moving from will become invisible, and the text and graphics for the next position will become visible. In the example above, the top became invisible, the middle become visible, and the bottom remained invisible.
- 2) During the screen saver, the contrast and brightness of the screen are reduced to save the life of the panel LCD elements.
- 3) If an alarm or fault condition occurs, the global icon associated with certain alarm level will also be displayed with the text, so that attention is drawn to the SEC 3500 panel, and the alarm speaker will also be beeping and the screen will be flickering.

4.3 Transitioning from Main Zone to Bus Summary



(Launch Main Menu)

- 1) By pressing on the bottom status bar button “Main Zone Summary”, the screen will change to the “Bus Summary” screen. This can also be accomplished by bringing up the Main Menu, choosing “Select Screen” and selecting “Bus Summary”.

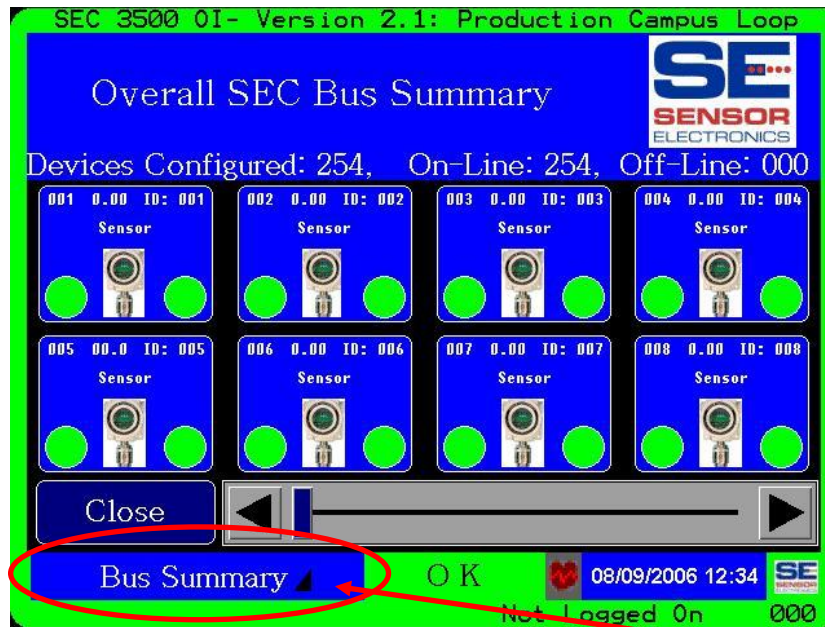


To transition Back to Main Zone Summary Screen, Press this button. More on this screen later.

4.3.1 Transitioning From Main Zone to Alarm Summary




(Launch Main Menu)

- 1) By pressing on the global status text button, the screen will change to the “Alarm Summary” screen. This can also be accomplished by bringing up the Main Menu, choosing “Select Screen” and selecting “Alarm Summary”.

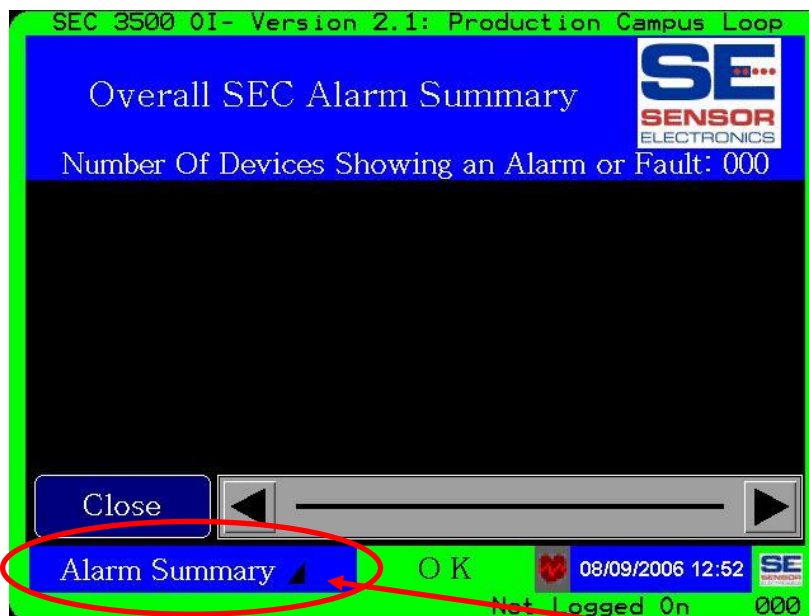


To transition Back to Main Zone Summary Screen, Press this button. More on this screen later.

4.3.2 Transitioning from Main Zone to Zone Details Screen

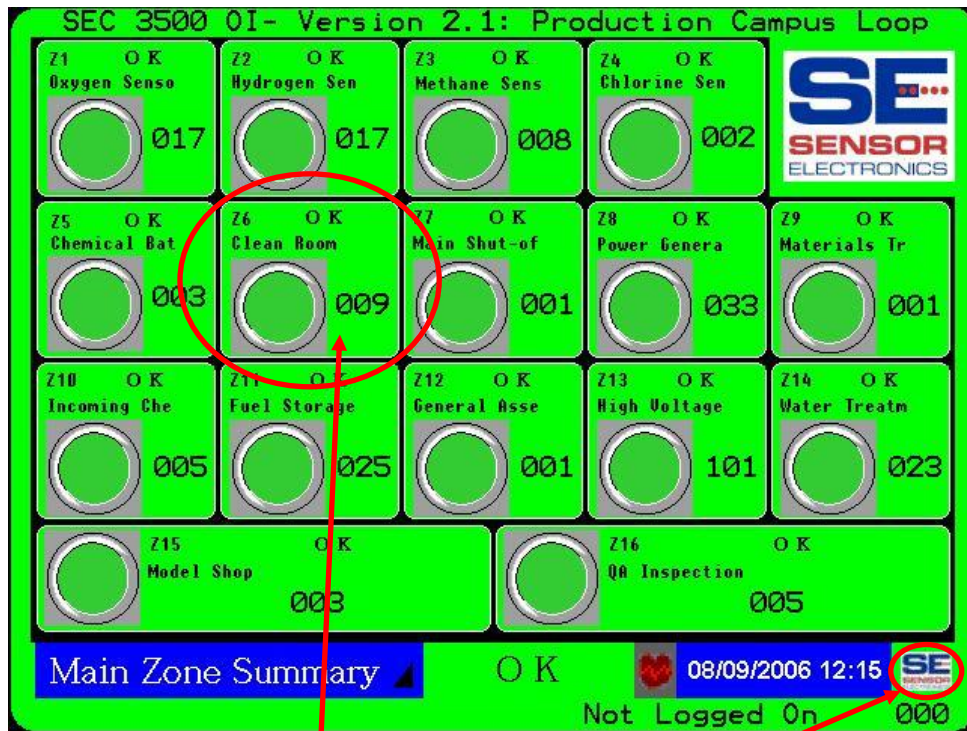


Simply press on the desired zone box, or bring up the Main Menu and select “Select Screen”, then “Zone Details”, then the desired zone number/name then press “Select”.

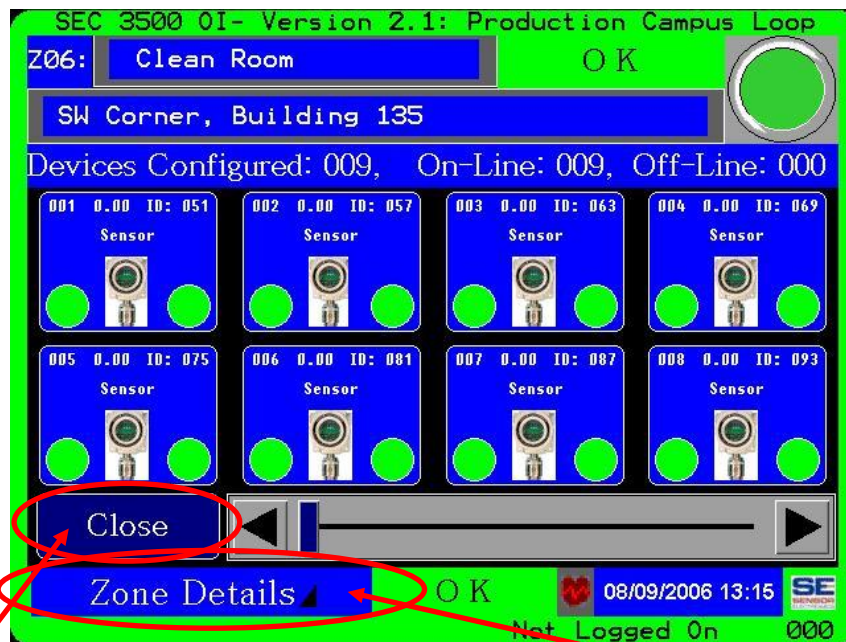

To transition Back to Main Zone Summary Screen, Press this button or “Close”. More on this screen later.


4.4 The Zone Details Screen

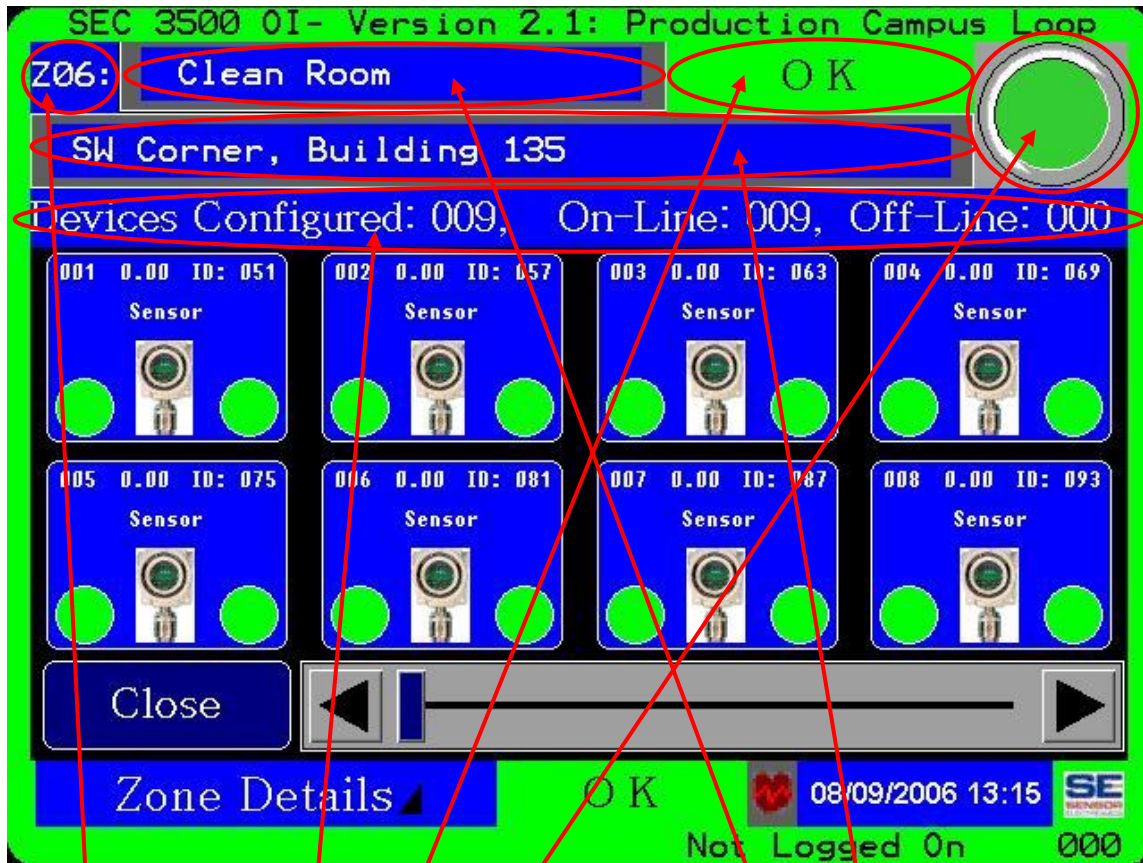

4.4.1 Zone Details Top Level Information

- 1) Zone Number.
- 2) Zone Name (can be modified- press the name, use the keypad).
- 3) Zone Location (can be modified- press the location, use the keypad).
- 4) Zone Alarm Status Text (As described in section 4.1.1), however it is NOT the global status alarm text, which is in the bottom status bar.
- 5) Zone Alarm Status Icon (As described in section 4.1.2, Item 1d), however it is NOT the global status alarm icon.
- 6) Zone Device Configuration, On-Line, Off-Line status list.

4.4.2 Zone Details Device Icons

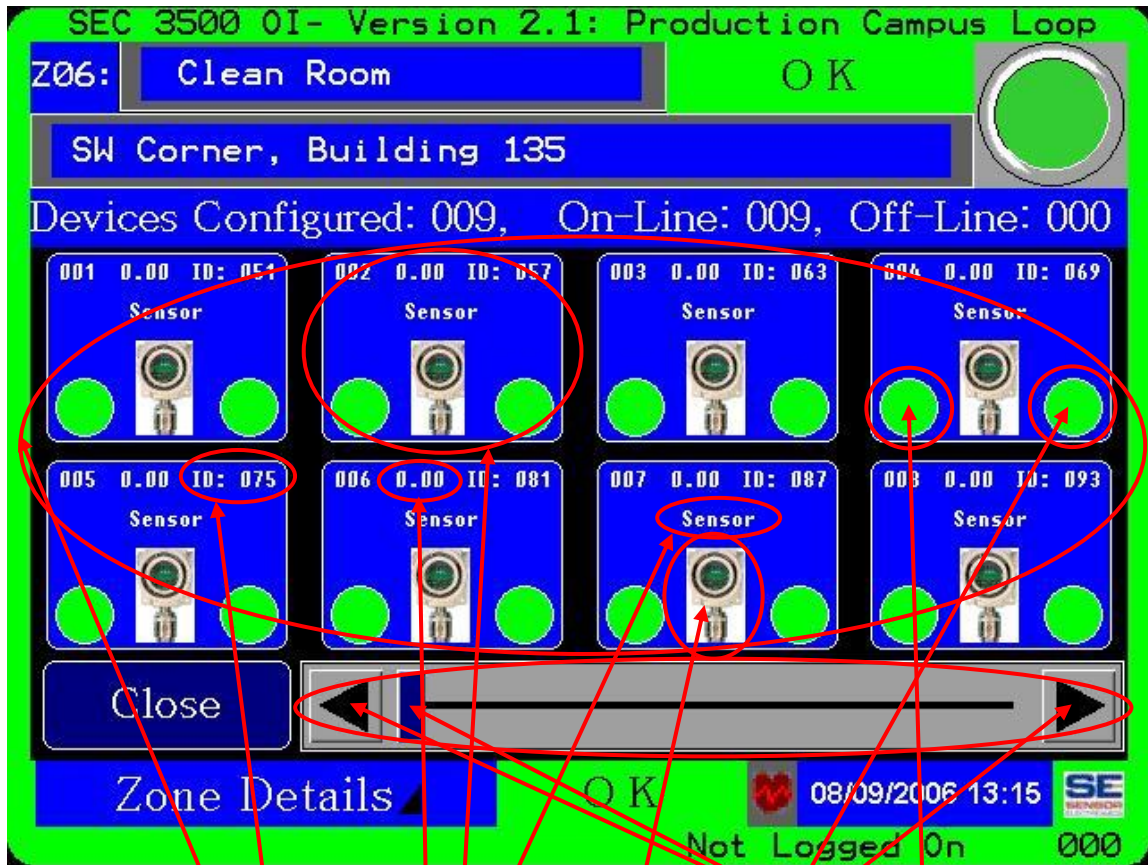

- 1) The zone device list of status boxes- eight at a time, and scrollable.
- 2) Each device Icon contains summary information about the device;
 - a) Device Network ID,
 - b) Current Gas Level (if a sensor),
 - c) Device Type Short Name,
 - d) Icon of basic device type (sensor as shown, relay module, etc.),
 - e) Alarm Status (represented by green, yellow, orange or red color) from device LED.
 - f) Fault Status (green or red color) from device LED.

4.4.3 Navigating to Device/Sensor Summary




Simply press on the desired device box from the “Zone Details” screen as shown.




To transition back to the Zone Details Screen, Press the “Close” button. More on this screen later.

4.4.4 Zone Details Screen Showing SEC Relay Modules

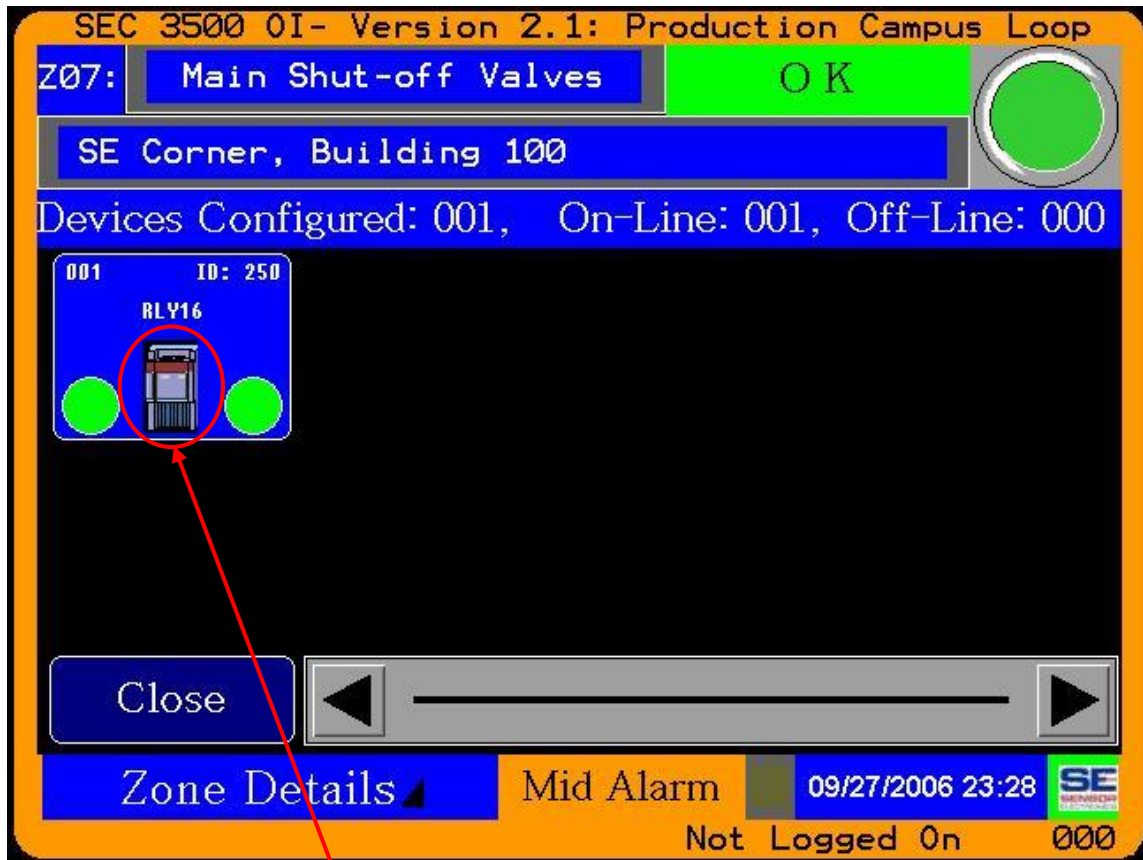


- 1) SEC 16 Coil Relay Module.

4.5 Bus Summary Screen

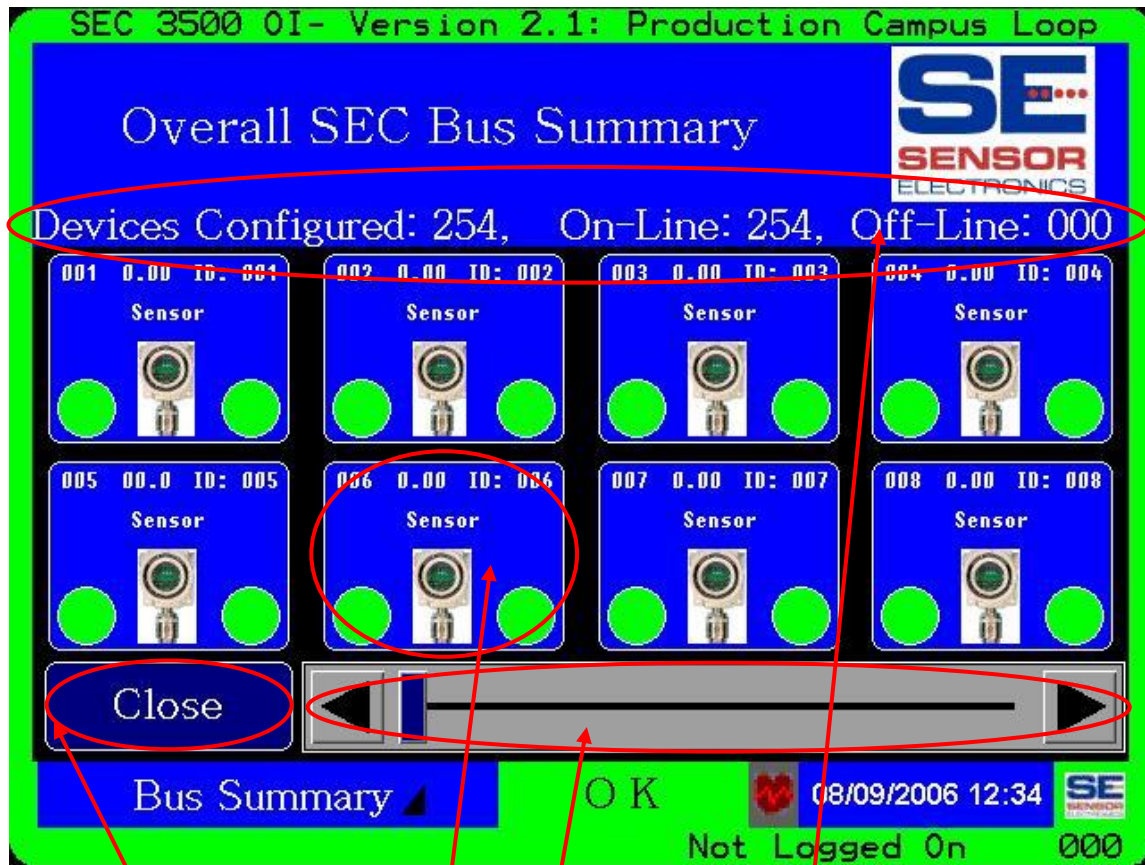

- 1) The Bus Summary Screen displays all Level 1 status information for all devices connected to the SEC 3500 Modbus Loop for this panel, regardless of zone assignments.
- 2) The borders of the screen act identically to all other normal operational screens such as the Main Zone Summary screen- they indicate the global loop alarm status.
- 3) Likewise, the bottom status bar acts just as the Main Zone Summary screen, in that it indicates the Login status, clock, communication activity, Global Loop alarm status text, screen title, main menu SEC logo and navigation toggling between this screen and Main Zone Summary by pressing the screen title button above.
- 4) By pressing the “Close” button, as previously described in section 4.3.2. The Main Zone Summary screen will be returned to as well.
- 5) Just as in the Zone Details screen, up to eight icons depict the device status of each device, eight at a time and scrollable from beginning to end, eight at a time.
- 6) Navigation to the Device Summary screen is also identical to the Zone Details screen, just select the desired device box and press it- the Device Summary Screen will appear. Likewise, the same information is also displayed in the device status boxes.
- 7) The top information box indicates the TOTAL devices configured on this panel’s Modbus 485 loop, as well as those on-line and off-line.



4.5.1 Bus Summary Screen Showing SEC Relay Modules

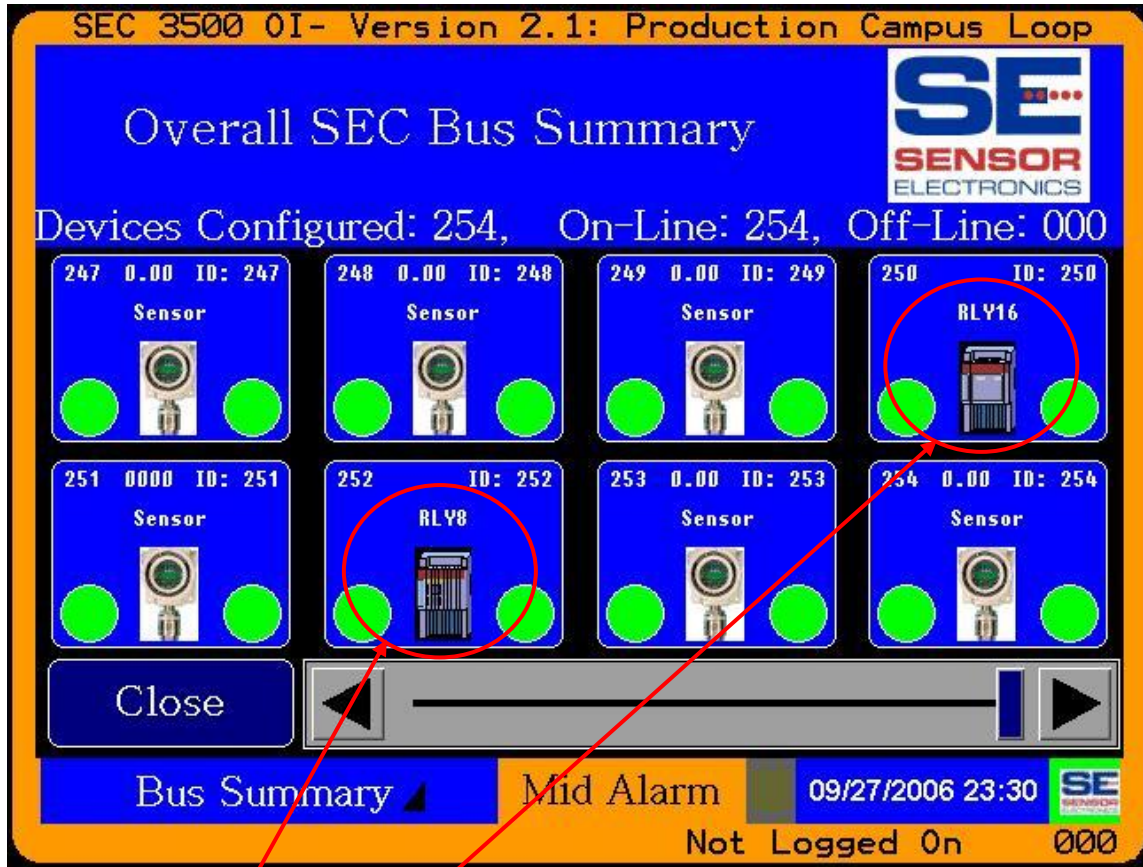

- 1) SEC 8 Coil Relay Module.
- 2) SEC 16 Coil Relay Module.
- 3) Note the difference between the icons, so they can be visually identifiable:


8 Coil Icon:

16 Coil Icon:

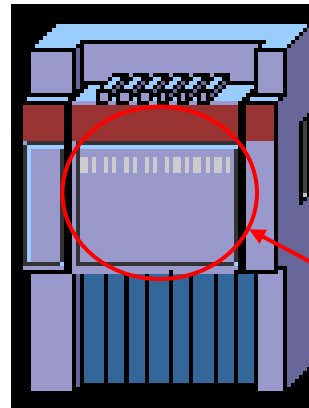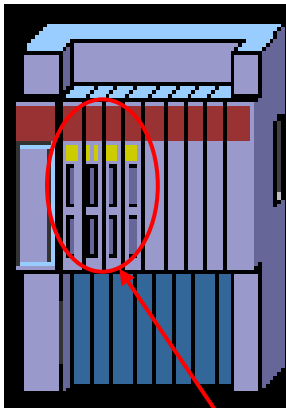

The left side of the 8 Coil Icon is filled, with the remainder open, whereas the 16 Coil Icon is completely filled.

4.6 Alarm Summary Screen

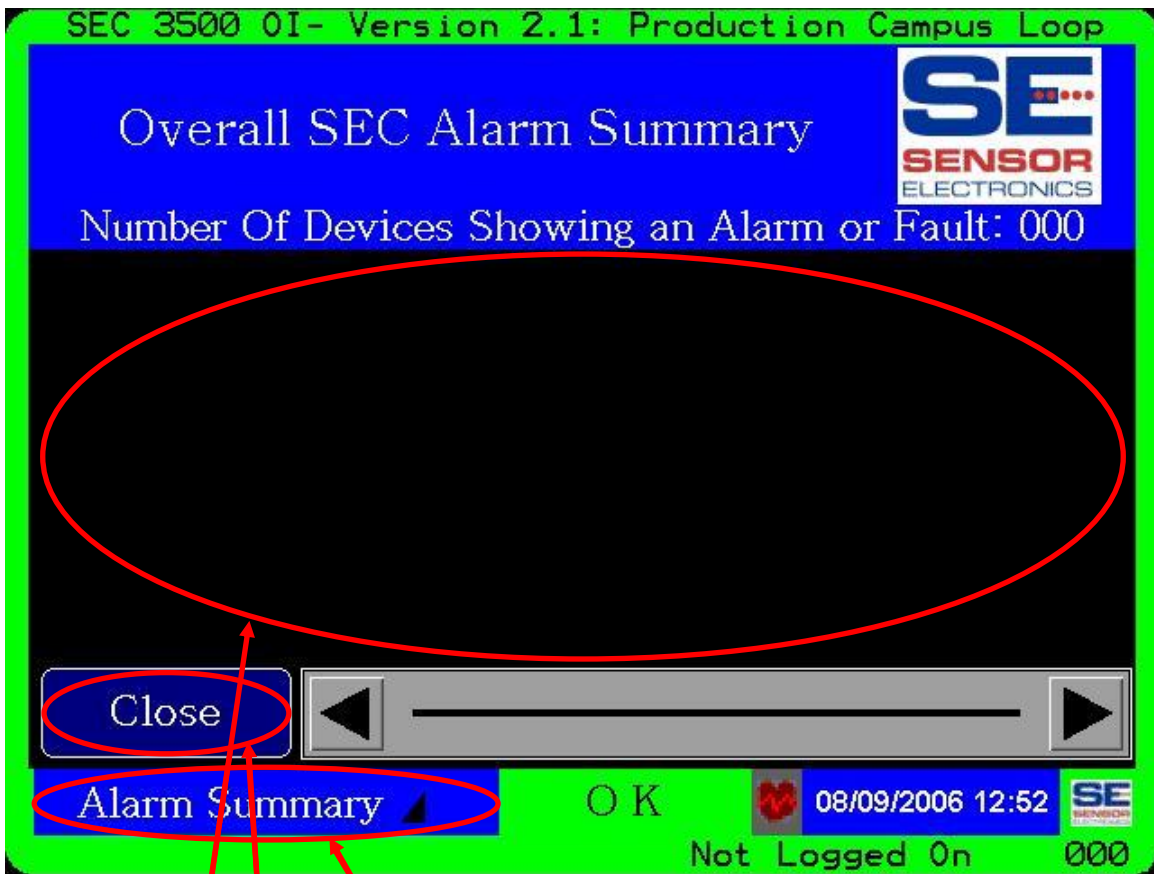


- 1) The Alarm Summary Screen displays device status icons for all devices in an alarm or fault state (does not include devices deemed off-line by an SEC 3500 generated fault). Hence it is possible (as shown above) to show a blank device information area if there are no devices in an alarm or fault condition. This would be the case if a device(s) deemed as off-line could cause the General Loop alarm status and particular zone status (on the Main Zone Summary screen) to show a fault without any device status boxes in the alarm summary above. Of course an empty display such as this is possible simply by navigating to it when there are no devices in an alarm or fault state.
- 2) All navigation and control in the bottom status bar is identical to the Main Zone Summary and other operations screens.
- 3) Pressing the “Close” button or the screen title in the bottom status bar returns the screen back to the Main Zone Summary screen. See the example on the following page.

4.6.1 Alarm Summary Returning to Home Zone Summary




4.6.2 Alarm Summary with Partial Set of Devices

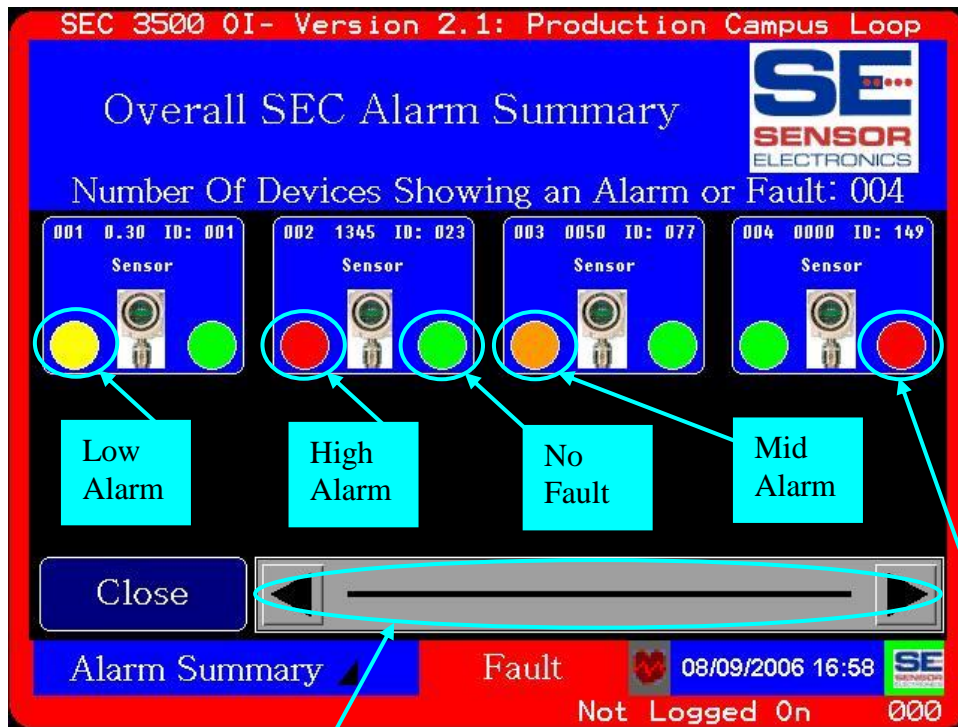

- 1) As shown above, only four devices are in an alarm or fault state. The one in the Fault state dominates as the highest global loop status shown in the borders and the bottom status bar.
- 2) Notice there is no navigation possible since there are less than nine devices.

4.6.3 Alarm Summary with more than eight devices

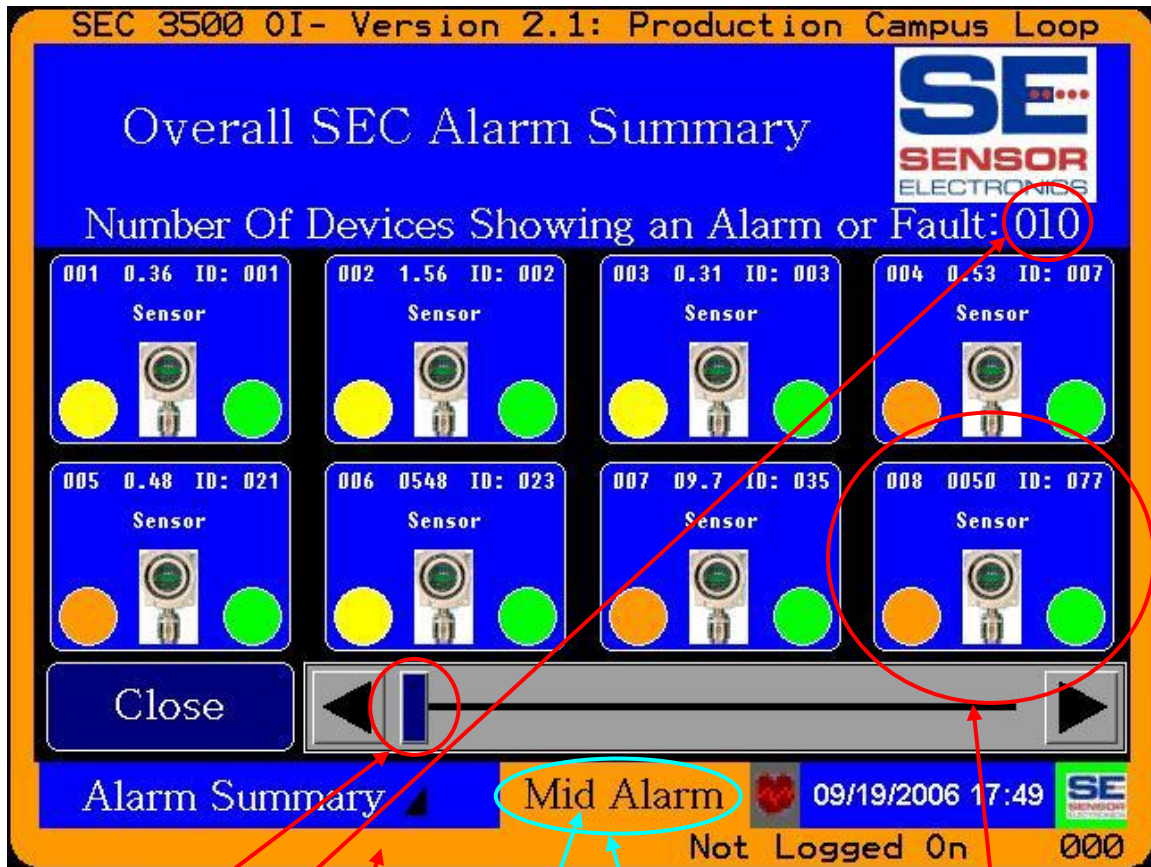

- 1) Here we have ten devices (eight shown at a time) in alarm conditions, with the ability to scroll eight at a time back and forth, start to end.
- 2) In this example, the highest alarm level of all devices and zones is a Mid Alarm, hence the Global Loop status shows the Orange Mid Alarm status in the borders and in the bottom status bar Global Loop Alarm Status Text.
- 3) In all operational screens, pressing on the bottom status bar Global Loop Alarm Status Text will send the display to the Alarm Summary screen, mute the alarm speaker (until a higher alarm level occurs), and refreshes the Alarm Summary screen.




Important Note: It is important to realize that common to the Zone Details, Bus Summary and Alarm Summary screens; by simple pressing on the device status box will launch the Device Summary screen.

4.7 Device Summary Screen



4.7.1 Top Level Device Information

- 1) Network ID- This is the SEC 3500 Modbus 485 Loop network ID for this device.
- 2) Zone ID- This is the SEC 3500 Zone this device is assigned to.
- 3) Device Description- This is a short name given to describe the device.
- 4) Zone Name- This is same name that appears on Zone Details and Zone Summary, and can be modified by selecting it here and entering a new name with the popup keypad.
- 5) Device Alarm Status Text- This is the specific device alarm status- NOT the zone or global alarm status text!
- 6) Device Alarm Status Icon- This is the specific device alarm status- NOT the zone or global alarm status text! Note: Pressing this icon will mute the alarm speaker.
- 7) Device On-Line Status- Indicates if the device is actively communicating with the panel, or is deemed off-line by the panel. This Icon is Up when on-line, down when off-line.
- 8) Device Type Text- Short name indicating type (Sensor or one of the Relay Modules).
- 9) Gas Short Name (for sensors) - Short name indicating the type of gas measured by the sensor.

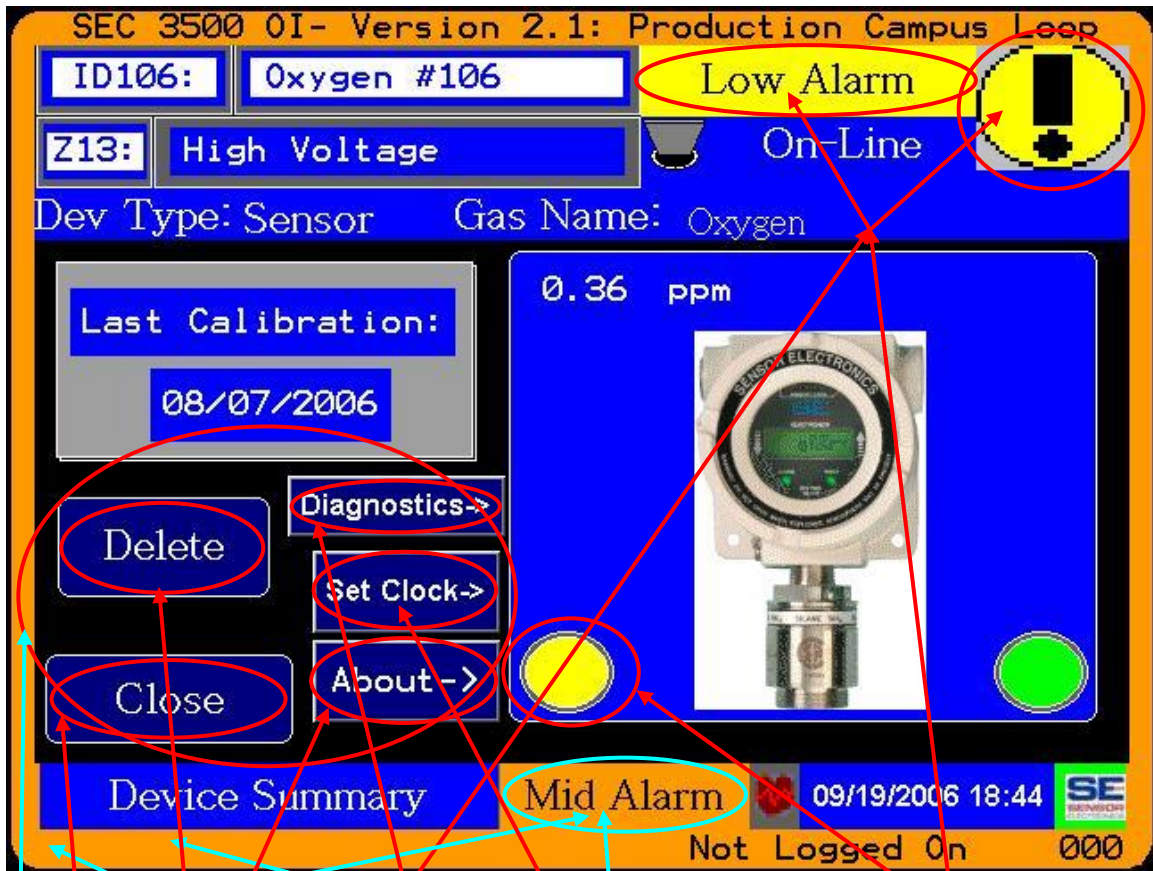


10) Notice how the Device Status Text and Icon can be different than the Global Status Text and borders. Hence what is depicted here is a device in a Low Alarm state, yet the Global Loop Status is depicted in a Mid Alarm state by another device(s).


4.7.2 Left Action Buttons

- 1) **Close**- Pressing on this button will return the display to the Zone Summary, Bus Summary or Alarm summary screen from where it came from.
- 2) **About**- Pressing this button will display information about the version info for the SEC 3100 and attached sensor.
- 3) **Set Clock**- Pressing this button will allow you to set this 3100 device clock or all 3100 device clocks.
- 4) **Diagnostics**- Perform special diagnostics on the SEC 3100 device.
- 5) **Delete**- Delete the SEC 3100 from the SEC 3500 Panel memory.

4.7.3 Summary Box Details

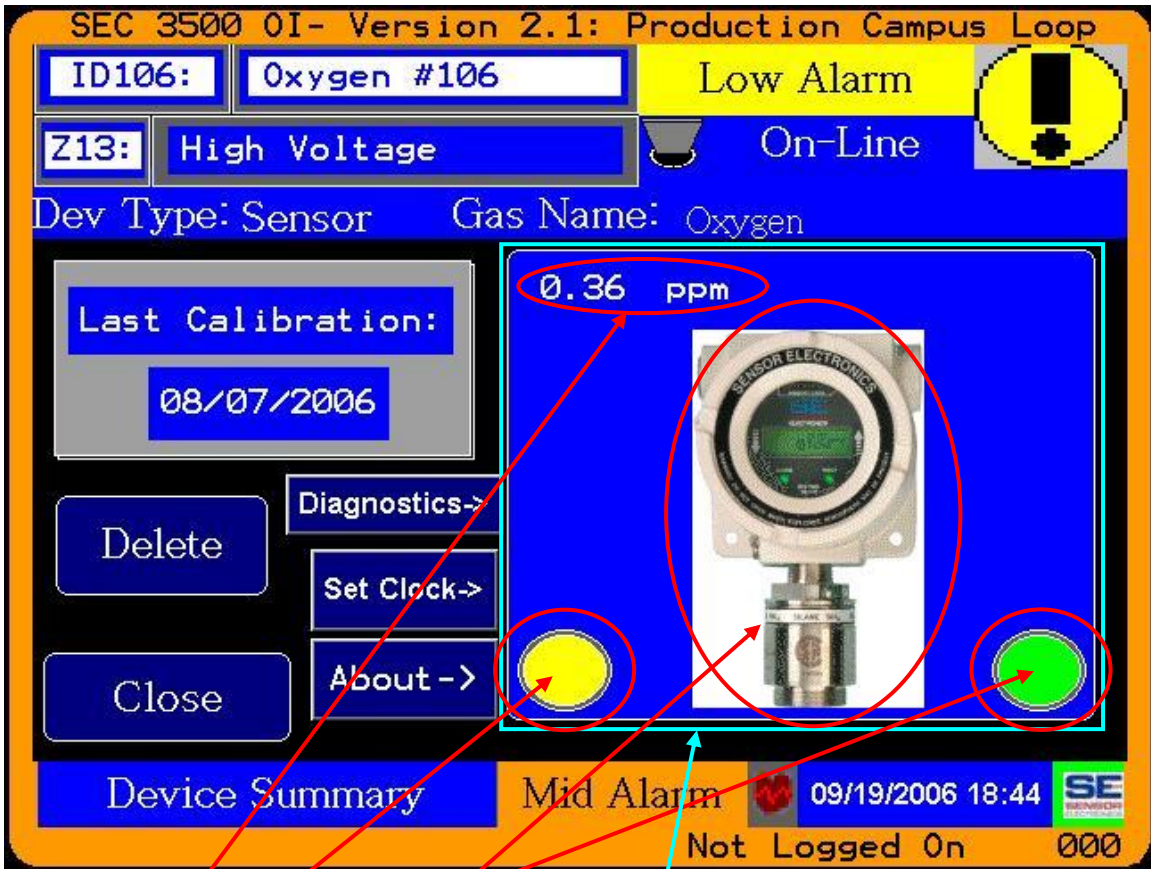

- 1) Current Sensor Gas Level and Gas Units.
- 2) Device Alarm Level Indicator (can be green-ok, yellow-low, orange-mid, red-high).
- 3) Device Fault Indicator (can be green-ok or red-fault).
- 4) Sensor Type Icon:
 - a) Toxic sensor as shown, and,
 - b) Infrared sensor as shown in section 4.7.1 and here

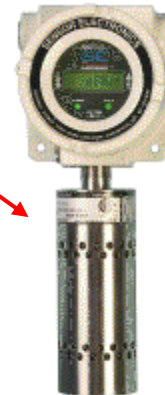

4.7.4 Navigation to Sensor Details Screen

By pressing any where in the Summary Details Box, the Sensor Device Details screen will be displayed.



Important Note: The Global Status Borders and Text are identical in appearance and behavior to all of the other operation screens, such as the Main Zone Summary Screen, as is the bottom status bar collection.

4.7.5 Device Summary Screen for SEC Relay16 Modules

SEC 3500 OI- Version 2.1: Production Campus Loop

ID250: RLY16 #250 OK

Z07: Main Shut-off Valves On-Line

Dev Type: RLY16 Block Name: Main Coils

Delete

SAVED

Close

Current Coil Values

01	02	03	04	05	06	07	08
Off	Off	Off	Off	Off	Off	Off	Off
Note: "On" = "Coil Energized"							
Off	Off	Off	Off	Off	Off	Off	Off
09	10	11	12	13	14	15	16

Press one above to assign


Reset Latched Relays
Now... ID: 250

Device Summary Mid Alarm 09/28/2006 00:33 SE

Not Logged On 000


Note: This is a 16 Coil Relay Module above.

4.7.6 Device Summary Screen for SEC Relay8 Modules

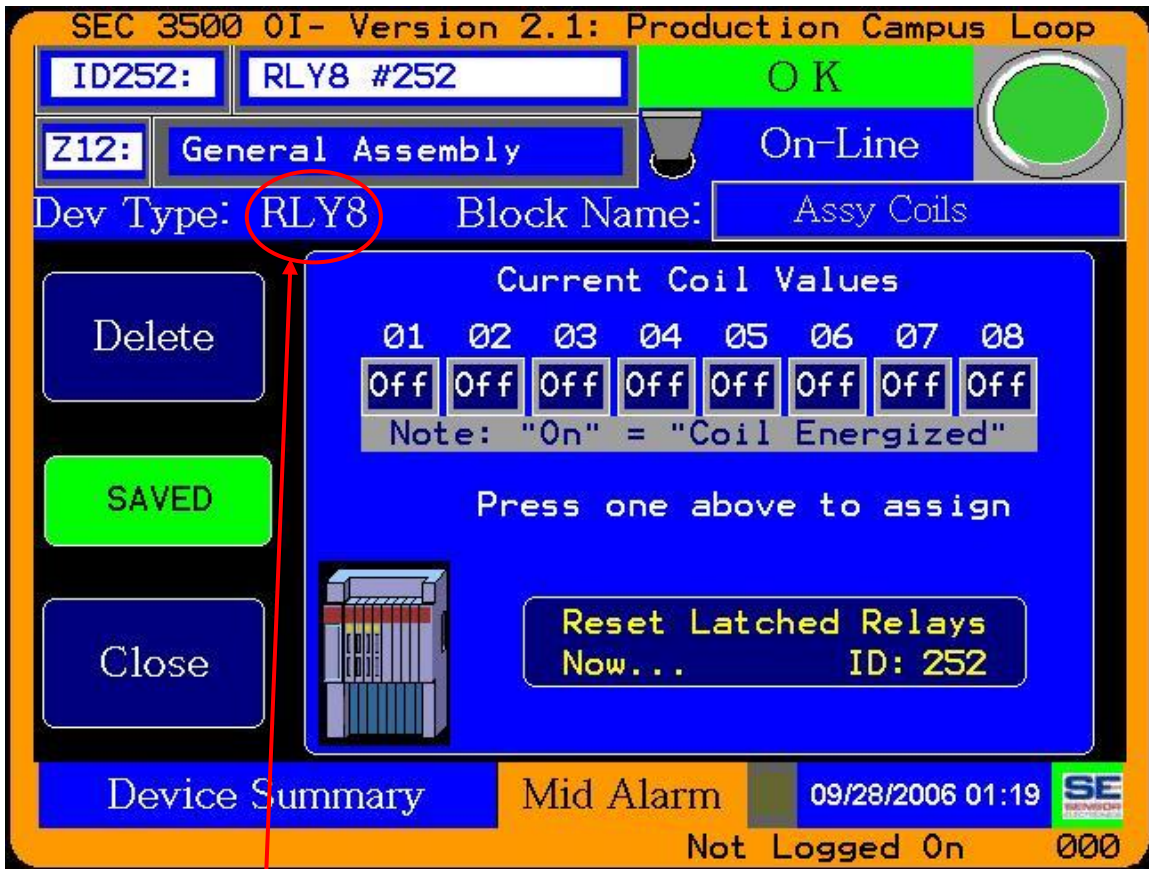

Note: This is an 8 Coil Relay Module above.

4.7.7 SEC Relay Module Device Summary Screen Specifics

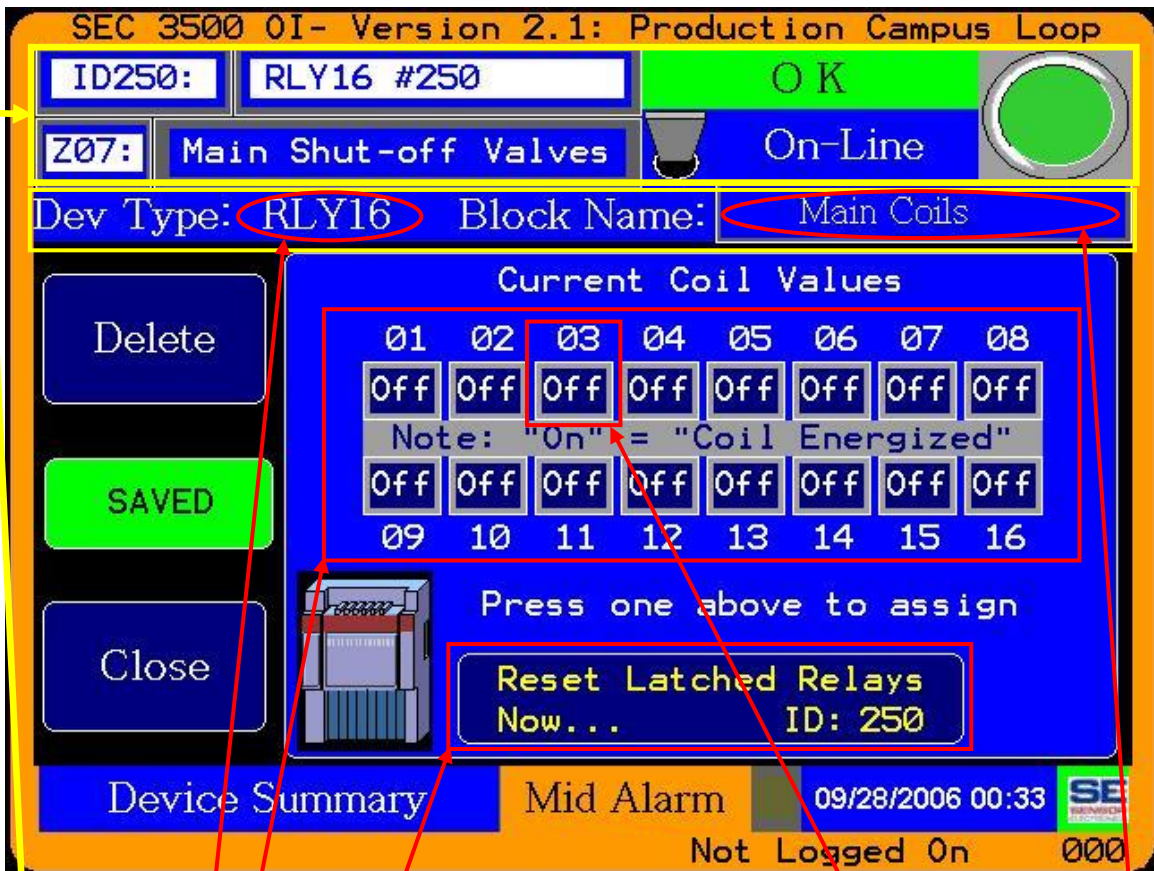

- 1) The top information panel is identical in information and function as the Sensor Device Summary, described in section 4.7.1.
- 2) The device type in the bottom bar of the top information panel shows the device type of either "RLY8" or "RLY16" for Relay Modules with eight coils or sixteen coils, respectively.
- 3) The Block Name in the bottom bar of the top information panel shows the user given name to describe the use of this bank of coils. It can be changed by simple touching the box or current name and pressing again to bring up the popup keypad and entering a new name.
- 4) The Main area of interest on this screen is in the center, under the heading "Current Coil Values". It shows the current "On" or "Off" state of each coil. Where "On" is defined as "Coil Energized". Any one of these coil state boxes may be pressed to bring up Coil Assignment Screen.
- 5) "Reset Latched Relays" issues a command to cause all coils to reset to "off" states.
- 6) The "Delete" button removes the Relay Module and resets the 3500.
- 7) The "Close" button returns to the Zone Details or Bus Summary screen where it had come from.
- 8) The "Saved" notice/button is used to permanently save changes made in assignments.


4.8 Sensor Details Screen



4.8.1 Top Level Information Box


- 1) All of this information is identical to the information shown in the Device Summary Screen for this device. See section 4.7.1 for details.
- 2) Navigating back to the Sensor Summary screen is accomplished simply by pressing the Sensor Summary button above.
- 3) The Global Alarm Status borders and Global Alarm Status text in the bottom status bar behave identically with the Device Summary Screen as mentioned in section 4.7.4.
- 4) Likewise, the Device Status Text and Icon behave identically with the Device Summary Screen as described in section 4.7.1.
- 5) And finally, the bottom bar status collection behaves identically with the Device Summary Screen as described in section 4.7.1, just as it does with the Main Zone Summary Screen and all other primary operation screens.

4.8.2 Details Box

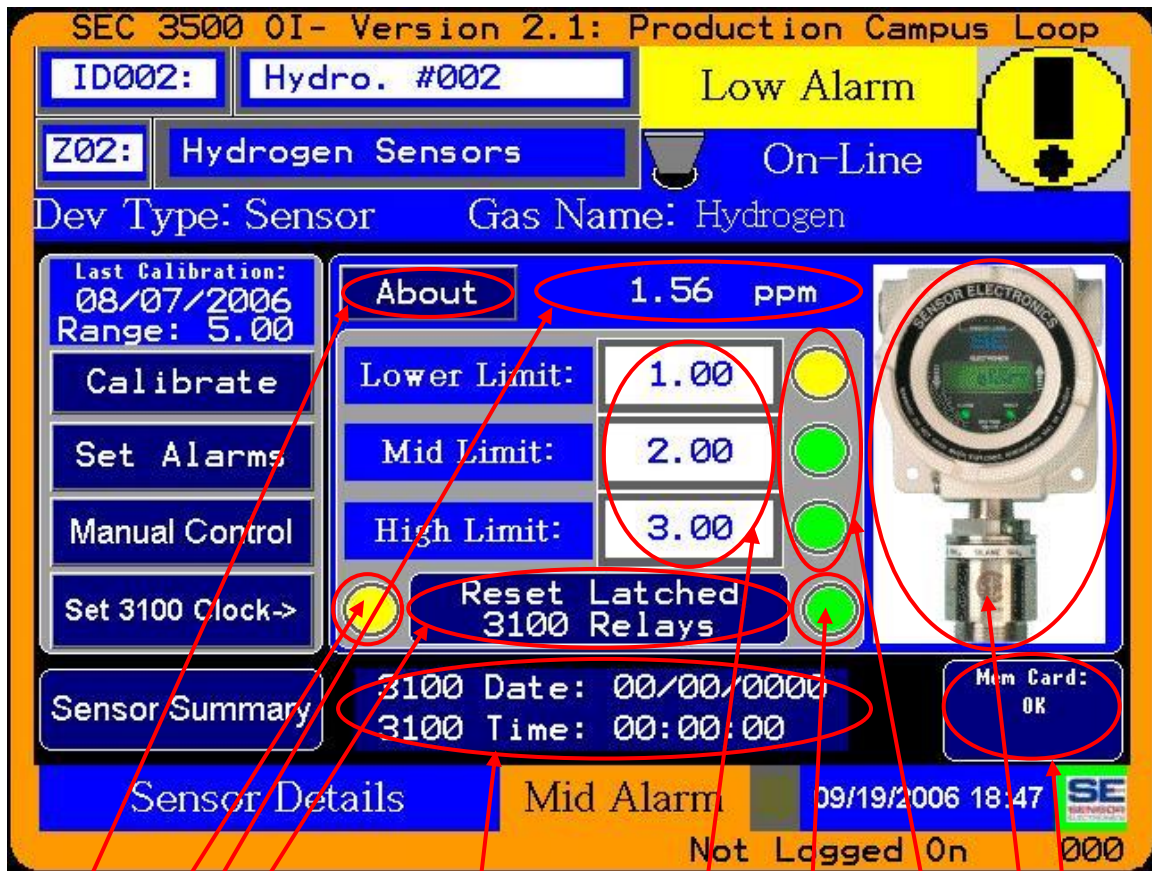

- 1) **About**- Pressing this button provides version information for the specific SEC 3100 device and the attached sensor.
- 2) **Current Gas Level and Units**- Displays the current Gas Level in the displayed measurement units.
- 3) **Device Alarm Level Indicator**- Displays the alarm level of the device, color-coded as previously described (green, yellow, red).
- 4) **Reset Latched 3100 Relays**- By pressing this button; request is made for the device to reset any 3100 relays that may have been previously latched.
- 5) **Alarm Set Points**- The alarm threshold set point values.
- 6) **Device Fault Indicator**- Displays the SEC 3100 device fault status (green or red).
- 7) **Independent Alarm Level Indicators**- Displays alarm indication for each individual alarm status conditions; Low is either green or yellow, Mid is either green or orange, High is either green or red. Only one can be any color other than green.
- 8) **Sensor Type Icon**- Displays the proper sensor type image, toxic or infrared as above.
- 9) **Current 3100 Date & Time**- Displays the current 3100 time and date retrieved from the 3100. It is updated with a yellow highlighted box in the seconds to indicate at that moment the time has been read and should be in agreement with the clock display for the panel.
- 10) **Status of the 3100 Flash Card**- OK or not. More details to come in a future version.

4.8.3 Control Panel

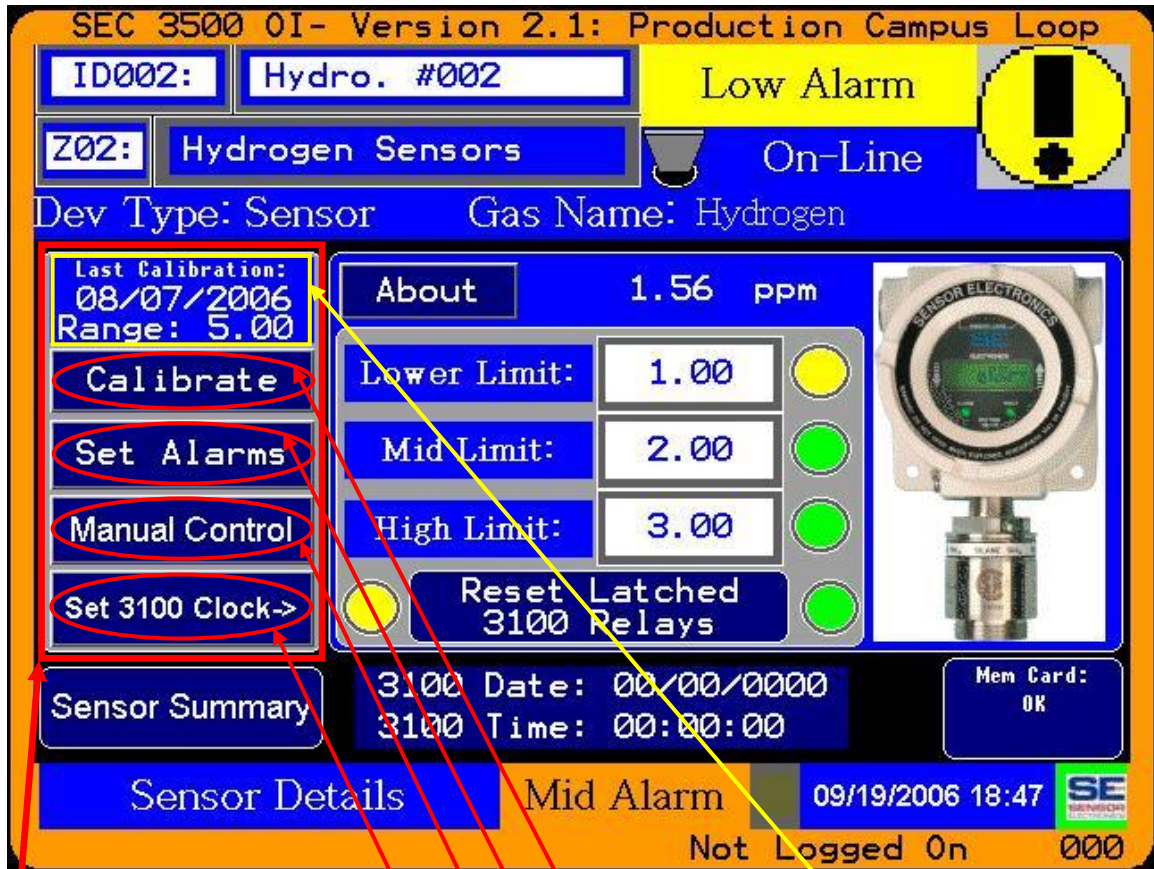

- 1) **Control Panel**- This display panel will remain in this location throughout all configuration screens that each of these control buttons will change to. Configuration is not handled in this manual.
- 2) **Info Box**- Displays the last calibration date and the range of the sensor.
- 3) **Calibrate**- Enters the calibration process screens. Not handled by this manual.
- 4) **Set Alarms**- Enters the alarm threshold set point screen. Not handled by this manual.
- 5) **Manual Control**- Allows manual drive and control of 3100 relays and lamp test. Not handled by this manual.
- 6) **Set 3100 Clock**- Allows setting this 3100 clock or all 3100 clocks on the bus.

4.8.4 Relay Module Device Coil Assignments Screen

SEC 3500 OI- Version 2.1: Production Campus Loop

ID250: RLY16 #250 OK

Z07: Main Shut-off Valves On-Line

Dev Type: RLY16 Block Name: Main Coils

SAVED Assignment for Coil:03, Below:

Selected Source: Device Device ID (1 - 254): 001	Selected Trigger(s): Low Alarm No Hi Alarm No Mid Alarm No Fault No Latch Type Normal Polarity N.DEN.
---	--

Temporary Force Coil:
 Enable Off

Modify Assignment Reset Latched Relays Now... ID: 250 Close

Relay Assignment Mid Alarm 09/28/2006 01:47 Not Logged On 000

- 1) The Top Information Panel is identical to the description previously, for the Relay Module Device Summary Screen.
- 2) The middle section of the screen displays the coil assignments for the coil number titled (for this example, it is coil #3).
- 3) It shows the source assigned (on the left) for the trigger action (on the right). The source may be a specific SEC 3100 device, a specific zone, or the global loop status.
- 4) The source assigned is used by the Boolean logic function established by the trigger panel to the right. It can be any combination of the four alarm conditions. A trigger remains active until a higher trigger becomes active (i.e. {example not shown above} If “Low Alarm” is only selected above, then when the Gas Level rises above the Low Alarm and causes the trigger to activate; and as the gas rises above the low alarm, the trigger will stay active until it reaches the mid alarm level- and since the mid alarm is NOT selected as a trigger in this example, the trigger becomes in-active until the gas level falls into its range.).
- 5) The trigger Boolean function result is then applied to the settings for how to engage the coil itself. If the “Polarity” above is set to normally de-energized (N.DEN.), then an active trigger will cause the coil to become energized, otherwise it will be de-energized.

SEC 3500 OI- Version 2.1: Production Campus Loop

ID250: RLY16 #250 OK

Z07: Main Shut-off Valves On-Line

Dev Type: RLY16 Block Name: Main Coils

SAVED Assignment for Coil:03, Below:


<p>Selected Source:</p> <p>Device</p> <p>Device ID (1 - 254): 001</p>	<p>Selected Trigger(s):</p> <p>Low Alarm No</p> <p>Hi Alarm No</p> <p>Mid Alarm No</p> <p>Fault No</p>
<p>Temporary Force Coil:</p> <p>Enable Off</p>	<p>Latch Type Normal</p> <p>Polarity N.DEN.</p>

Modify Assignment Reset Latched Relays Now... ID: 250 Close

Relay Assignment Mid Alarm 09/28/2006 01:47 SE Not Logged On 000

- 6) If the Coil has been set to remain latched once a trigger has activated, then no matter what conditions exist, the coil energy cannot be changed by any successive triggers until it is reset.
- 7) Pressing the “Close” button returns the screen to the Relay Module Device Summary screen.
- 8) The Temporary Force coil box is not accessible to the basic operator, but allowable when the supervisor operator is logged in. See the Supervisor’s Manual for more information.
- 9) The “Modify Assignment” button is also not accessible to the basic operator. See the Supervisor’s Manual for more information.
- 10) The “Saved” status/button is used to indicate whether an assignment has been permanently saved or if it needs to be saved. This is not accessible to the basic operator; please see the Supervisor’s Manual for more information.
- 11) There are three “Latch Type” modes (shown above is “Normal”): “Normal”- no latching, “Latching”- which remains latched as described above in item 6), and “Audible”- which is intended for audible sounding equipment and remains on so long as a trigger condition exists, and off when all conditions clear. This is a special latch type since it can be silenced (unlike “Normal” or “Latching”) while a trigger exists. This is silenced as described in section 2.1 previously, for “Immediate Alarm Silence”.

5.0 Basic Menu Navigation

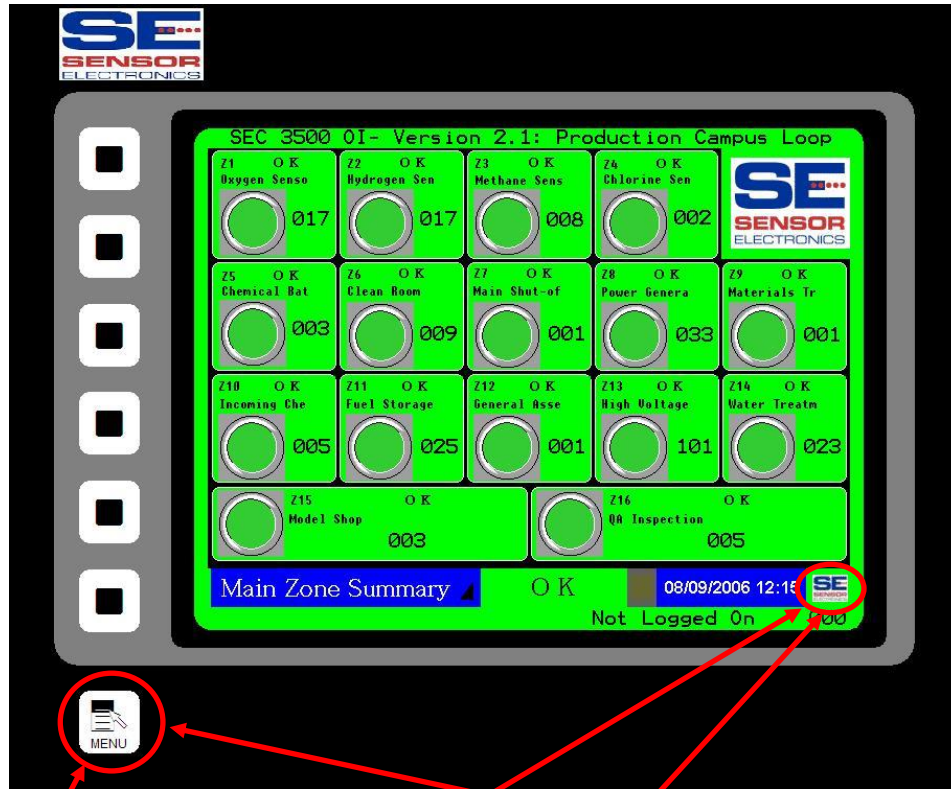

(Menu Button Areas)

Everything begins with the Main Menu. Therefore, there are two primary ways of gaining access to the Menu System;

- 1) Through the menu push button on the bottom-left corner of the panel (not the touch-screen).
- 2) Through touching the small SEC Logo at the bottom-right corner of the touch-screen area.

Either method is equally valid, and always present and active, regardless of the operational screen. There are some utility screens that do not have the SEC Logo, and usually provide an on-screen button to access the menu; however, you can always access the main menu from the panel button as described in consideration 1 above.


Menu items exist for most major functions that can also be accessed faster directly on screen, however, all of this is under a security system, organized for different types of users. This manual was designed for the basic operator; hence we will not go into the other levels other than to mention them. It is noteworthy that the main menu appears slightly different depending on what user is logged in- in the sense of what items are inactive, and sub-menus are definitely different depending on the operator logged in.

5.1 Main Menu



- 1) **Safe Power Off**- Selecting this item is crucial for insuring that data collected, settings made, etc. are permanently stored. Data is stored in internal volatile RAM, and occasionally stored into permanent storage after varying periods of time. To insure that there is no data loss due to this uncertainty, selecting this option causes this data to be permanently saved, the panel is prepared for a valid power-of condition, and will not display the main page until the operator is ready for normal operation, thus insuring the communication busses are essential down. See section 5.2.
- 2) **About SEC...**- Pressing this touch item pops up the information box, describing the contact information for Sensor Electronics Corporation, as well as the firmware version of the SEC 3500, and provides a shortcut to logging into the panel. See section 5.3.
- 3) **Login/Logout**- Pressing this allows the user to Login to another account, or logout of the current account. For higher level users, this allows passwords to be changed as well. See section 5.4.
- 4) **Screen Selection**- This is the primary selection used by operators for screen navigation; it allows the operator to select a specific screen or function screen to go to. See section 5.5.
- 5) **Supervisor Menu**- Notice that it is missing the surrounding box with white borders. This indicates that it is inactive. When the operator is logged in as the supervisor or higher user, this item will be fully active as the others and allow the supervisor user to access other sub-menus for configuration.
- 6) **Exit Menu**- Pressing this should cause the menu to be removed from the screen behind it.

5.2 Safe Power-Down Screen

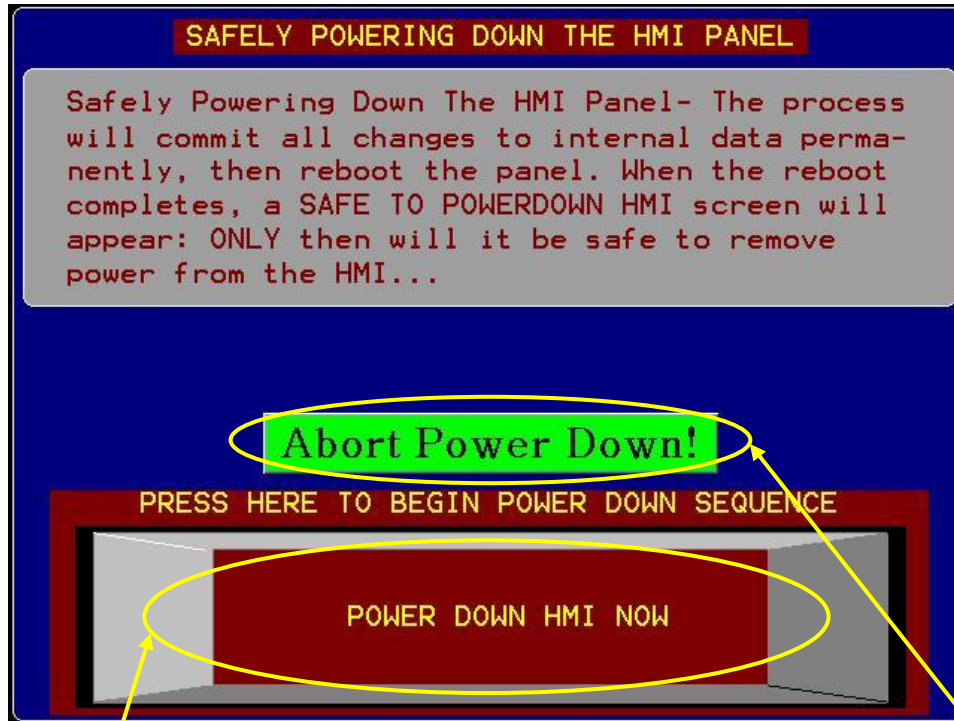


At this point, if the operator intended to safely shut the panel down, then press the “POWER DOWN HMI NOW” button, otherwise if it was unintentional, press the “Abort Power Down!” button. “Abort...” will return back to the Main Zone Summary screen. Pressing “POWER DOWN HMI NOW” will begin the power down process, first showing this screen while data is saved:



Then the 3500 panel resets, displays the splash page and displays the following page:




This screen will continue to display every time the panel is powered down until “Restart” above is pressed. So for now, if the intention is to safely shut down; now is the proper time to remove power from the panel. When the panel is power back on, the screen will return. And if you are ready to return to normal operation, then press the “Restart” button, and the following screen will be displayed:

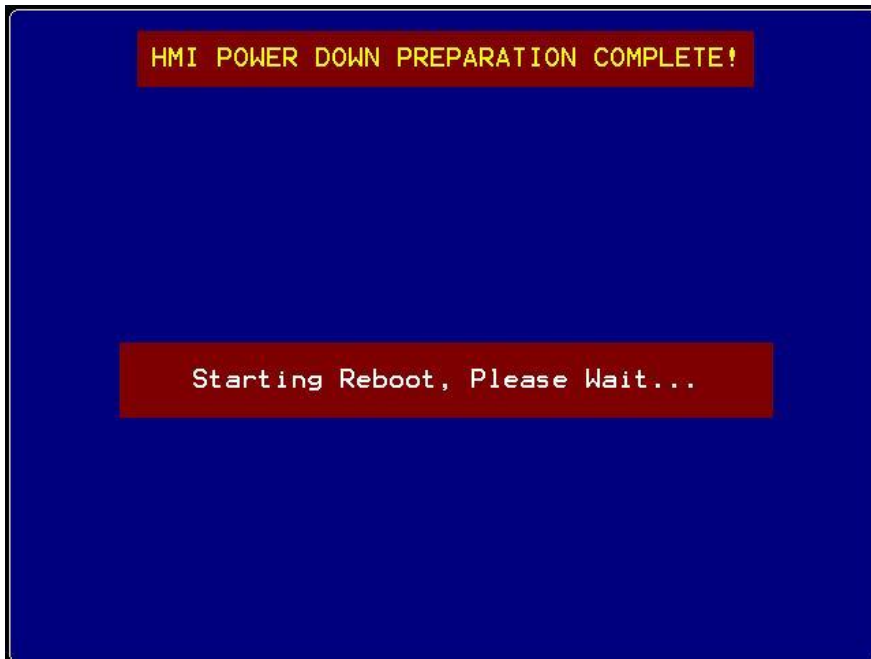


Followed by the 3500 panel restarting, the splash screen displayed and the Main Zone Summary screen display- Normal Operation has now been resumed.

5.3 “About SEC...” Popup Display

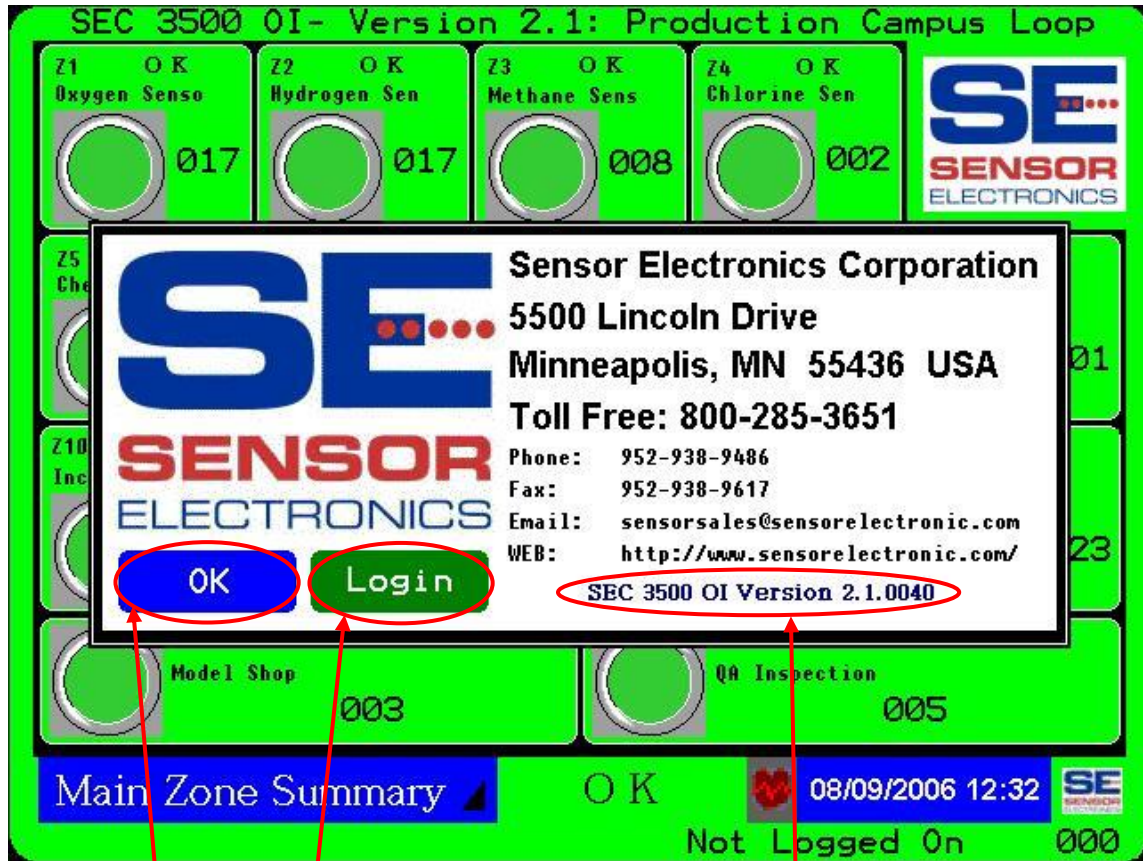


- 1) The SEC “About”... box is shown either by selecting it off the Main Menu, or by pressing the SEC logo on ANY screen. The small logo at the bottom-right of any screen will launch the Main Menu; however the larger icon show at the top-right of any screen will launch this “About box” directly.
- 2) The “OK” button may be pressed at anytime before the popup is automatically removed after thirty seconds, and it will be immediately removed.
- 3) The “Login” button may be pressed at anytime before the popup is automatically removed after thirty seconds, and the “Security” screen will be launched- See section 5.4.
- 4) The primary content of this information box is to provide the contact information for Sensor Electronics Corporation. In addition, the version number information of the SEC 3500 panel is also displayed, necessary for SEC Customer Support to help diagnose any customer issue that may arise.

5.4 The Security Screen- Login/Logout

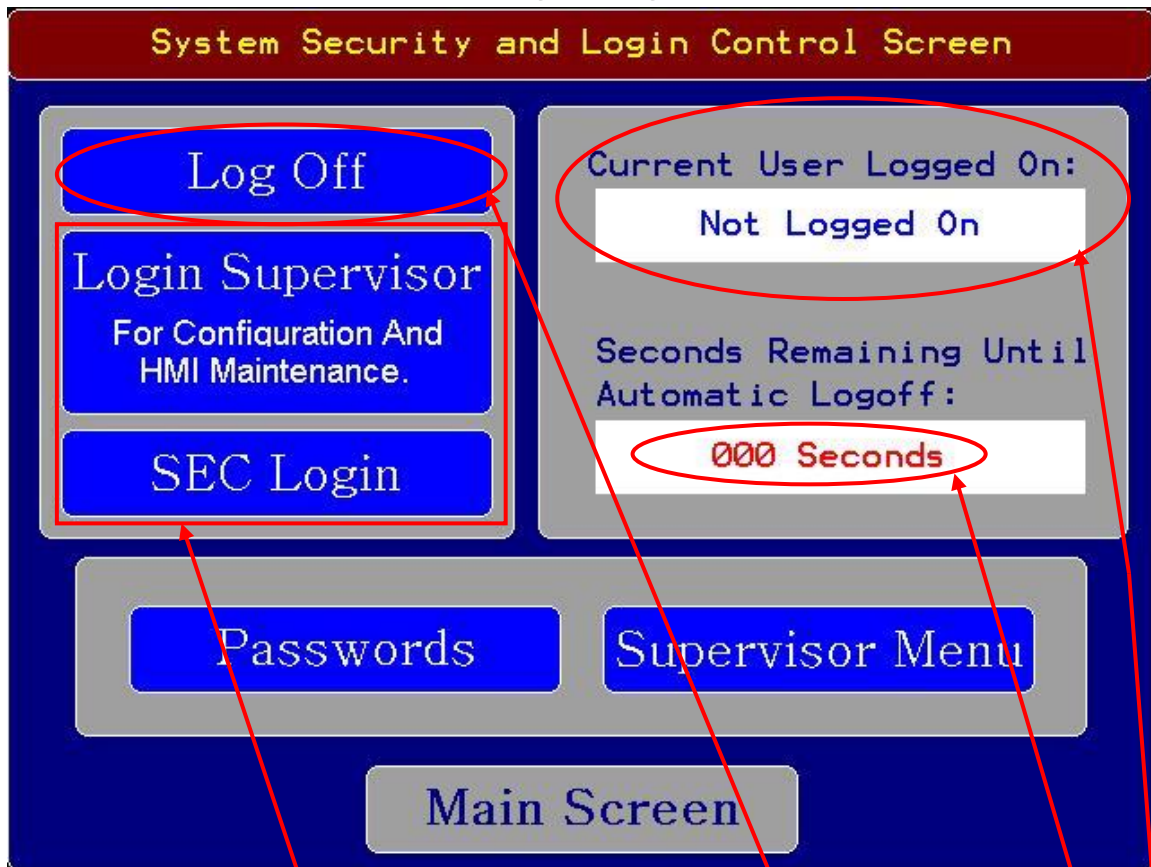


- 1) The security system of the SEC 3500 OI Panel is established to maintain three levels of increasing capability, configuration and information. It is managed by what user is logged on. Which user category is logged in at any given time is displayed above on this screen, and as well on the bottom of the primary operation screens, along with the amount of time remaining until that user is automatically logged off. It is set for ten minutes (600 seconds), and cannot be modified, or restarted by touch screen activity (as contrasted by the screen saver and screen timeouts).
- 2) The basic operator category, which audience this manual is written for, does not have to login to the panel. If a higher category user is logged in and is ready to leave the panel, that user should go to this security screen and choose to “Log Off” to return the SEC 3500 operational behavior and security settings to the basic operator category.
- 3) The two remaining operator categories, shown above, can be logged in by pressing on their respective button, entering the user name and password as the popup keypad entry displays appear. If all is entered properly, the user will show that it is logged on above as well as a count down of the time remaining. See “Startup Basics Guide” section 3.0 (1) and (2) previously for an example.

5.5 Screen Selection Menu

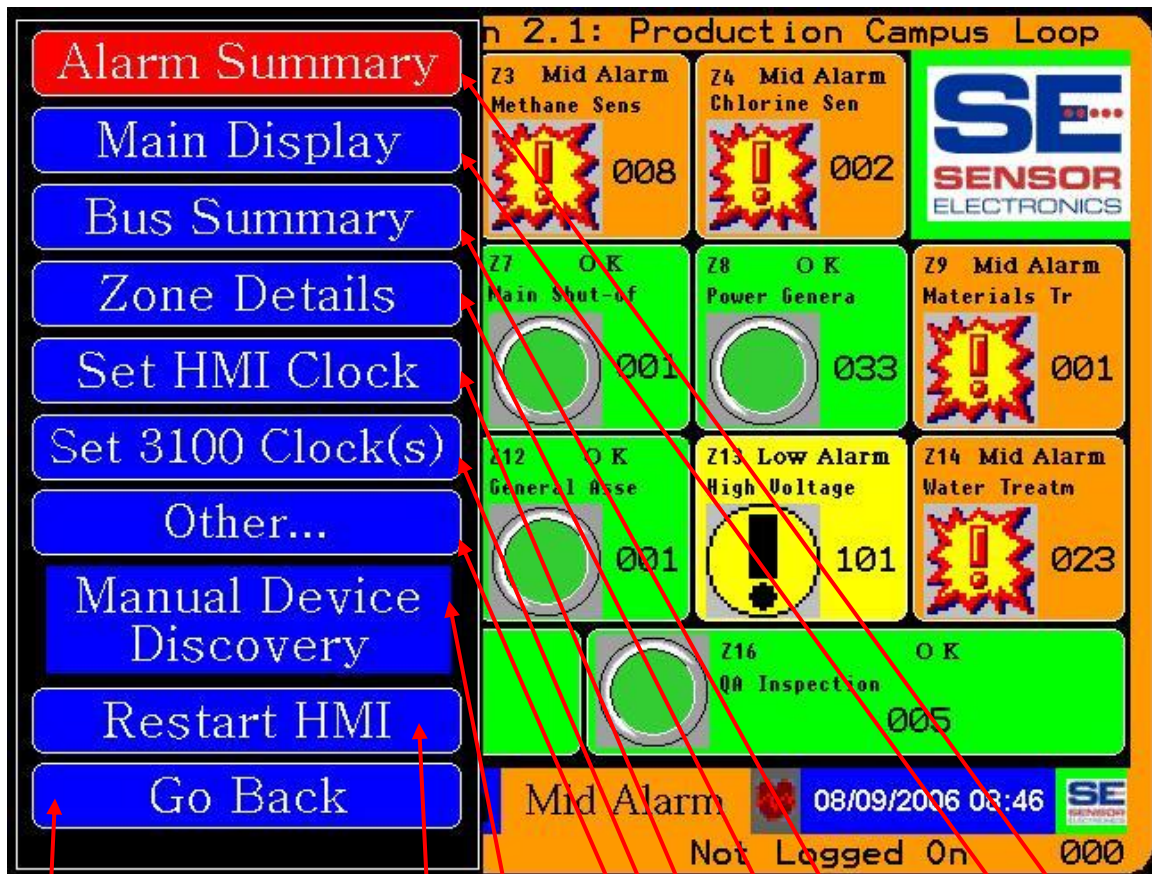


- 1) **Alarm Summary**- Transitions to the Alarm Summary screen when pressed. See section 4.6.
- 2) **Main Display**- Transitions to the Main Zone Summary screen when pressed. See section 4.1.
- 3) **Bus Summary**- Transitions to the Bus Summary screen when pressed. See sec. 4.5.
- 4) **Zone Details**- Shows a zone selection menu screen when pressed. See section 5.5.1.
- 5) **Set HMI Clock**- Transitions to the Change SEC 3500 clock screen when pressed. See “Startup Basics Guide” section 3.0 (7).
- 6) **Set 3100 Clock(s)** - Transitions to the set 3100 Clock screen. See section 5.5.2.
- 7) **Other...** - This is a placeholder for a future main menu item. No action occurs if pressed.
- 8) **Manual Device Discovery**- See “Startup Basics Guide” section 3.0 (3).
- 9) **Restart HMI**- Saves all permanent data not saved and reboots the SEC 3500 Panel. See section 5.5.3.
- 10) **Go Back**- This will transition back to the Main Menu.

5.5.1 Zone Details Selection Menu

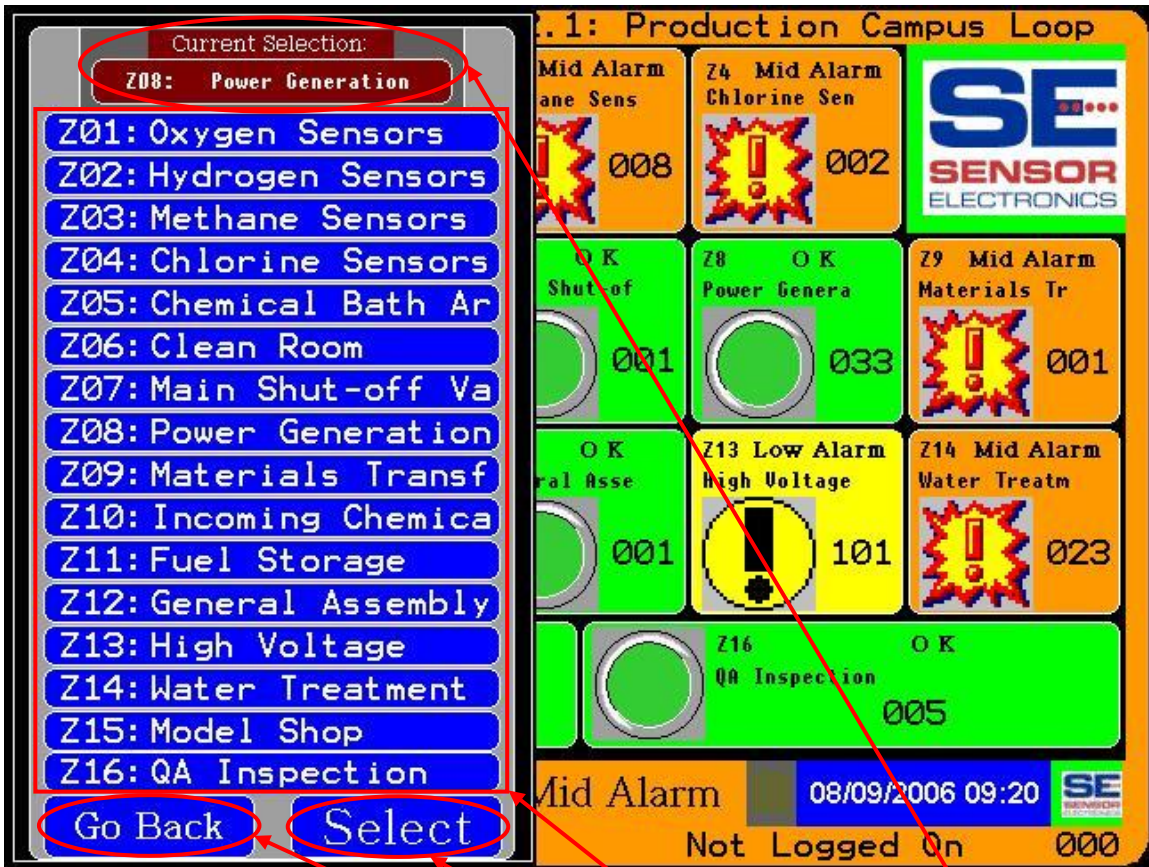


- 1) This menu allows the operator to select a specific zone to show zone details for. By pressing one of the above zone number/name buttons, the current selection is updated above.
- 2) If this is not the desired menu, then press “Go Back” to return to the screen selection menu.
- 3) If this is the desired menu (zone screen selection menu), press the “Select” button above and the screen will transition to the Zone Details screen with the information for the selection zone. See section 4.4.

5.5.2 Set 3100 Clock Screen

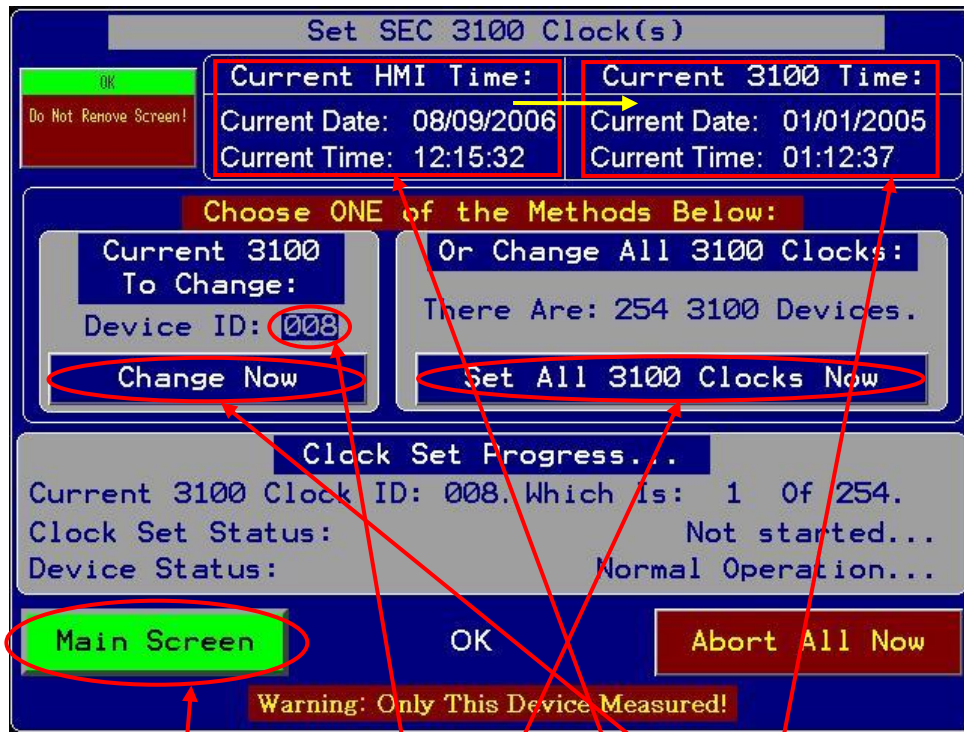


- 1) Setting an individual 3100 clock or all 3100 clocks on the specific SEC 3500 Loop 485 Modbus; is accomplished by either pressing the “Change Now” button to the left, or pressing the “Set All 3100 Clocks Now” to the right in the middle of the screen.
- 2) When Changing only one 3100 clock, the desired SEC 3100 unit to change can be changed by pressing the Device ID field and changing the number in the popup keypad that will show.
- 3) When a 3100 clock is being set, the current HMI date and time as displayed above, are copied into the 3100 device shown above to the right. It will advance the 3100 clock a few seconds if necessary so that the net result is close to the HMI time, however during the process, it continuously retrieves the latest HMI time. If the minute, hour or date is within thirty to fifteen seconds of rolling over, then it will wait until the rollover occurs, and then applies the set-ahead principle just mentioned. When a clock is done, it can be as much as five seconds behind the HMI due to the number of polls of the 3100 clock needed to validate; and this does cause some latency.
- 4) When all clocks are being set, the process marches through all 3100 devices on the bus that are in a proper state to accept clock changes; hence it is possible that all 3100 clocks on the bus are not changed. This is a very efficient way to set 100’s of clocks.
- 5) Press “Main Screen” when clock setting is complete.
- 6) Transitioning to or from this screen results in transitioning through the primary loop stop and start screens, as previously described in “Startup Basics Guide” section 3.0 (2) and (5).

5.5.3 Restarting the SEC 3500 HMI

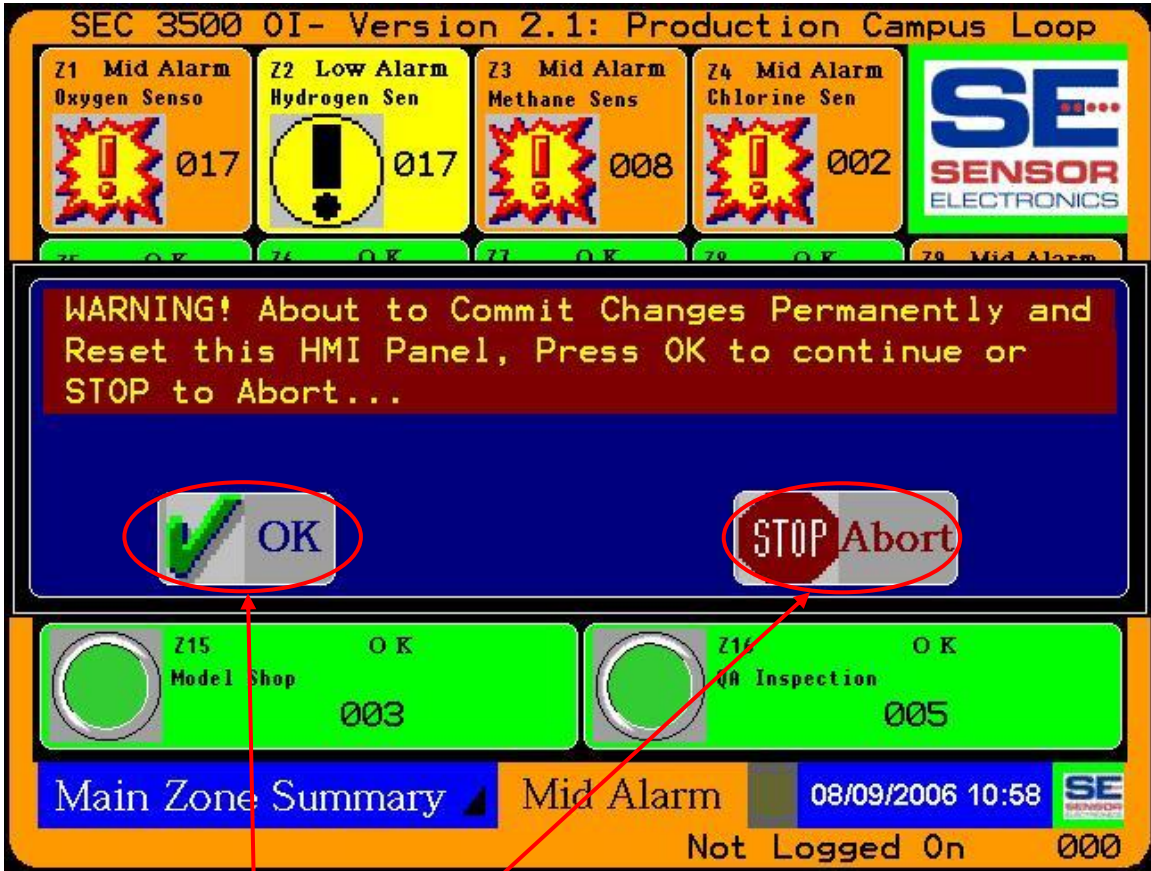

When Reset HMI is selected from the Screen Selection Menu or from another action on a configuration screen, this display box will popup, and in this case, will allow the operator to choose to Abort/Stop before starting, or if truly desiring to restart the HMI, then by pressing "OK", it will then permanently save all data (the popup display will change to the diagram below) to NVRAM and restart the HMI:

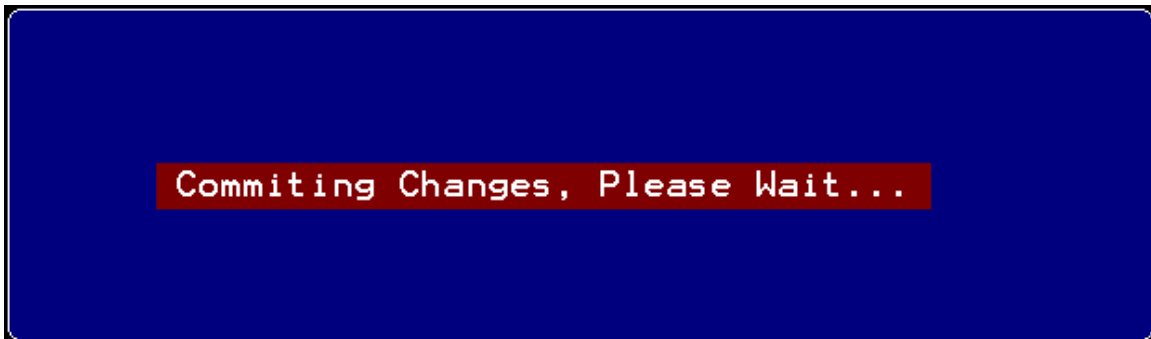

The SEC 3500 panel will then reboot, the splash screen will appear, and the Main Zone Summary screen will be displayed and normal operation resumed.

6.0 Basic Trouble-Shooting

1) **Q - *I cannot find any of my SEC 3100 devices on the 3500.***

A - (a) If all of the zones are grey on the Main Zone summary screen, and the Bus Summary screen is empty, or if you cannot find your devices on either of these screens, then you should (b) Follow the setup instructions in section 3.0. If after following the instructions in manually discovering devices in section 3.0 and it does not discover any devices *before* you leave manual Discovery, then the problem most likely is that the devices are not properly configured, or there is a wiring problem- Review your wiring, configuration settings, etc. (c) Otherwise, if Manual Discovery finds your devices then this is normal operation if (i) you do not have Automatic Discovery enabled (default) or (ii) you did not wait long enough for Automatic Discovery to find them (which could take tens of minutes, depending on bus-load).

2) **Q – *Every time I power-cycle my SEC 3500, it displays an “OK to shutdown the panel” screen, and I cannot see the Main screens.***

A – It is necessary to press the “Restart” button at the center of the screen, to return it to normal operation after a safe power shutdown. Once it is pressed, the screen should indicate that it is rebooting the HMI. The SEC 3500 should reboot, flash the splash screen and eventually show the Main Zone Summary screen. If this does not work, call SEC Customer Service.

3) **Q – *When I upgrade the SEC 3500 firmware via Compact Flash card and cycle the power, it stops with a black screen on power up with a GMC code and an error message. What should I do?***

A – Contact SEC Customer Service- it may be an acceptable code for a panel repair currently under repair but not yet released. Customer Service will guide you through the next steps.

4) **Q – *When I need to power down the SEC 3500 Panel, do I always have to use the “Power Down Safely” menu option?***

A – Generally speaking- *yes*. Data is accumulated by the SEC 3500 when there are devices attached to its Modbus and configured to consider them online. Also, any configuration settings made, devices added, devices deleted, modified, etc. are saved in temporary RAM, and are saved to permanent NVRAM based on a roughly six minute last-updated-rule to extend the life of the internal flash memory storage. This does not mean that the SEC 3500 could become corrupt and non-functional like a personal computer, just that some data might not be saved if powering down safely is not performed before a power cycle.

- 5) **Q – *When I press certain areas of the screen, it displays “Insufficient User Rights!!”- Why?***
A – Because certain areas can launch configuration of such items however the user logged in (or not if an operator) does not have the proper rights to perform that function. Log in as the proper user and try it again.
- 6) **Q – *When a sensor drifts into an error, and I am viewing the Sensor Details screen, it falls back to the Device Summary screen, even when I push on the summary icon, it just keeps falling back. Why can’t I view these details?***
A – When a sensor has an error, which could be any number of things including the transmitter (3100) communicating erratically or off-line, or even the sensor head removed or calibrating, etc; The SEC 3500 does not trust that the details are sound or correct, so it falls back and displays the specific and general error conditions for that device. When that device returns to normal operation, it will allow the sensor details to again be viewed.
- 7) **Q – *When the screen saver appears, does it continue to measure Gas and Status on the Modbus Loop of all configured SEC 3100 Devices?***
A – Yes. And if any device enters an alarm or fault condition, the global alarm/fault status will be set accordingly and the screen saver will display both the global alarm text and the global alarm icon for that alarm level and if alarms have not been muted, the speaker will be sounding out the alarm.

7.0 How Does the SEC 3500 Modbus 485 Loop Work?

The SEC 3500 collects gas level and status information from all SEC 3100 Advanced Digital Gas Transmitters in a continuous loop, one device at a time, over an RS485 Modbus RTU loop. It is the master; meaning the 3500 is the only device on the bus allowed to initiate communication. It does this by issuing a Gas&Status Request to a given 3100 device (the Modbus slave), then wait's for it to respond with its Gas&Status data, or timeout. Then it moves on to the next device in the loop. Once all 3100 devices are polled, it rolls up the alarm status for each zone, and then rolls up alarm status of all zones (global alarm status). Then it sets mapped SEC Relay Module coils accordingly, changes the alarm display borders and the zone and global alarm status.

The SEC 3500 maintains an internal database of all device values, parameters and alarm conditions. The database is updated when device information is read from the device. Zone and global alarm information is stored in the database when the zone and global alarm status rollups occur. The user interface is updated after that, depending on which screen is displayed; which pulls its information from the database.

Since the SEC 3500 provides external interface broadcasts, just before the next gas detection data collection scan occurs, the StatCast Gas Status Text Broadcast feature operates, pulling data from the internal database, translating it into text and sending the status and gas data text out the RS232 port for external consumption. It also rolls up the status into a status update Web page, for external WEB browser support.

Timeout Handling-

- 1) During a scan, when a device fails to respond within the required timeout windows (start bit window, byte-to-byte window, total packet response window), it will attempt a second transmission after the full packet window has expired, and will attempt to receive the response within the given timeout windows. If this again fails, the SEC 3500 will move on to the next device and apply the same rule. This rule applies for devices that are on-line, and during gas and status requests.
- 2) When detailed information is attempted, such as following off-line to on-line transitions, configuration updates at the SEC 3100, calibration, or an error condition; The number of attempts per data item increases to the configurable “maximum bring on-line” value, typically twenty attempts. These block transfers are considered critical, and must get through, hence waiting for detailed data is worth the price in time, since this should be a rare but intentional action to fulfill a user display request.
- 3) In both (1) and (2) above, once the maximum allowed (and configurable) “offline warning” (incremented each time one of these declares a timeout) counts are reached, the device is treated is untrustworthy, and a warning is displayed on the screen.
- 4) If the maximum allowed (and configurable) “offline count” is reached, the device is declared off-line, and the user cannot interact with it effectively until it returns to normal operation. This will cause the SEC 3500 to generate a zone fault for it.